

crazy about

titanium drilling

DRILLING UP TO 50 X D

NEW



*internal
cooling*

*For all
titanium grades*

*A wide range
 $\varnothing 0.1 - 6.35 \text{ mm}$*

Up to 50 x d




high quality holes

flexibility



*integrated
cooling*

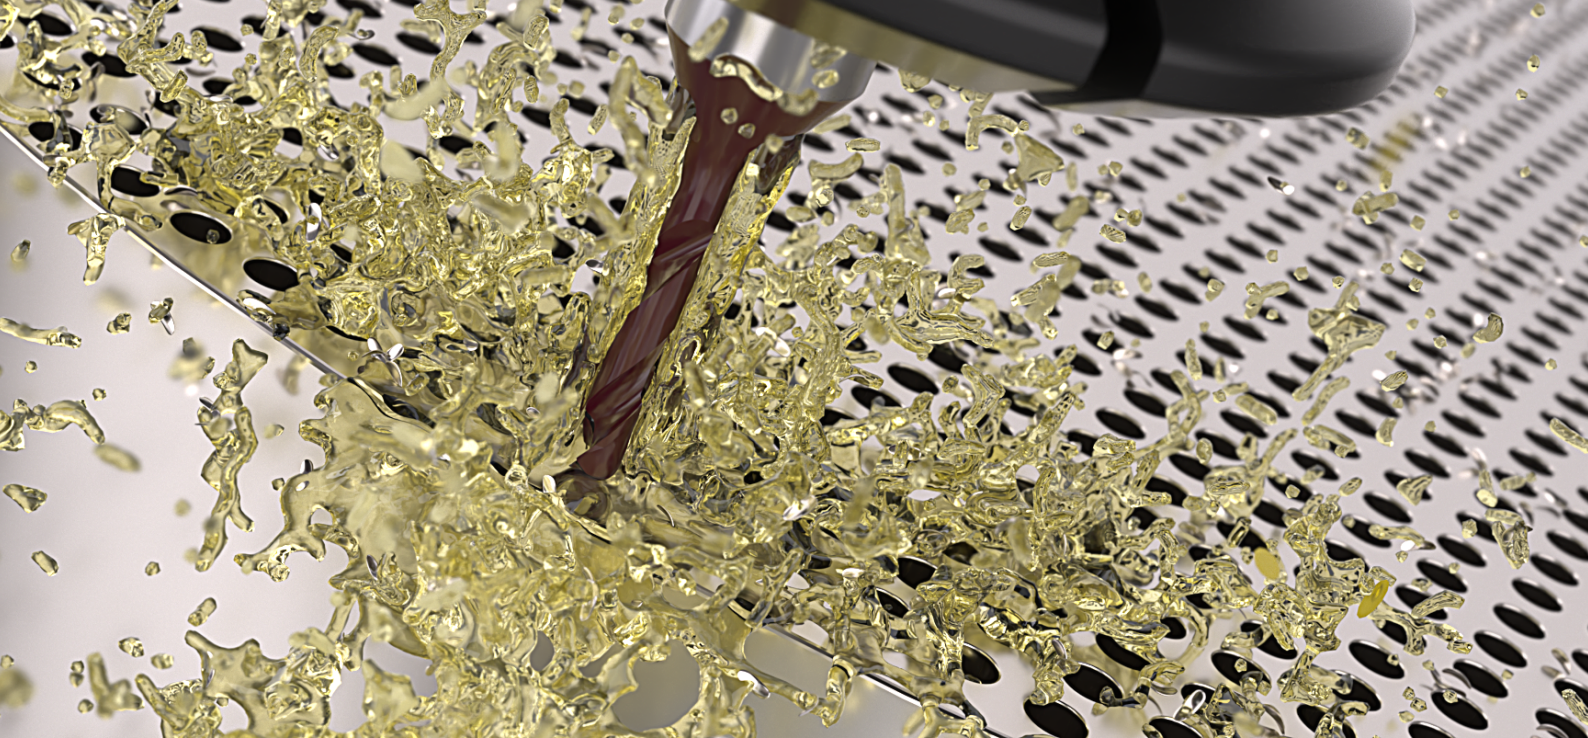

DRILLING TITANIUM - CHALLENGES AND SOLUTIONS!

Machining titanium grades presents several unique challenges due to the material's distinctive properties. These materials are favored for their high strength, light weight, biocompatibility, and exceptional rust and corrosion resistance, making them an ideal choice for aerospace, medical, and various industrial applications. However, these beneficial attributes also pose significant difficulties in machining, particularly in drilling.

Mikron Tool's R&D department spent years in researching with our customers how to overcome those challenges. Mikron Tool presents top notch high-end solid carbide drills:

- **CrazyDrill Titanium TK / TN:** A micro drill specifically developed for pure and alloyed titanium in the diameter range between 0.2 and 2.0 mm with a drilling depth up to 6 x d
- **CrazyDrill Flex Titanium:** A micro deep-hole drill specifically developed for pure titanium in the diameter range between 0.1 and 1.2 mm with a drilling depth up to 50 x d
- **CrazyDrill Flex Titanium ATK:** A micro deep-hole drill specifically developed for alloyed titanium in the diameter range between 0.3 and 2.0 mm with a drilling depth up to 50 x d
- **CrazyDrill Cool Titanium ATC / PTC:** Two specific drill geometries developed for pure titanium (PTC) and alloyed titanium (ATC) in the diameter range between 1.0 and 6.35 mm with drilling depth up to 10 x d in one shot

NEW

INDEX

1	OVERVIEW OF TOOLS FOR TITANIUM	4
2	CRAZYDRILL TITANIUM TK / TN Drilling depth 3 x d and 6 x d, Ø 0.2 - 2.0 mm, for pure and alloyed titanium	6
3	CRAZYDRILL FLEX TITANIUM Drilling depth 3 x d, 30 x d and 50 x d, Ø 0.1 - 1.2 mm, for pure titanium	26
	CRAZYDRILL FLEX TITANIUM ATK Drilling depth 30 x d and 50 x d, Ø 0.3 - 2.0 mm, for alloyed titanium	
4	CRAZYDRILL COOL TITANIUM ATC / PTC Drilling depth 3 x d, 6 x d and 10 x d, Ø 1.0 - 6.35 mm, for pure and alloyed titanium	54

NEW


Overview of tools for titanium

RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

NEW

		ø - range [mm]	max. depth	Cooling		P	M	K	N	S ₁	S ₂		S ₃	H ₁	H ₂	Page
						Unalloyed and alloyed steel	Stainless steel	Cast iron	Non ferrous metals	Super alloys	Pure titanium	Alloyed titanium	CoCr alloys	Hardened steel <55 HRC	Hardened steel ≥55 HRC	
				Int.	Ext.											
CRAZYDRILL™ by Mikron Tool Titanium		0.2 – 2.0	3 x d 6 x d	✓	✓	☒	☒	☒	☒	☒	●	●	☒	☒	☒	6
CRAZYDRILL™ by Mikron Tool Flexpilot ^{TITANIUM}		0.1 – 1.2	3 x d	-	✓	☒	☒	☒	◐	☒	●	○	☒	☒	☒	26
CRAZYDRILL™ by Mikron Tool Flex ^{TITANIUM}		0.1 – 1.2	30 x d 50 x d	✓	✓	☒	☒	☒	◐	☒	●	○	☒	☒	☒	26
CRAZYDRILL™ by Mikron Tool Flex ^{TITANIUM} ATK		0.3 – 2.0	30 x d 50 x d	✓	-	☒	☒	☒	☒	☒	☒	●	☒	☒	☒	26
CRAZYDRILL™ by Mikron Tool Coolpilot Titanium ^{ATC}		1.0 – 6.35	3 x d +90° counter- sink	✓	-	☒	☒	☒	☒	☒	☒	●	☒	☒	☒	54
CRAZYDRILL™ by Mikron Tool Cool Titanium ^{ATC}		1.0 – 6.35	6 x d 10 x d	✓	-	☒	☒	☒	☒	☒	☒	●	☒	☒	☒	54
CRAZYDRILL™ by Mikron Tool Cool Titanium ^{PTC}		1.0 – 6.35	3 x d 6 x d	✓	-	☒	☒	☒	☒	☒	●	☒	☒	☒	☒	54

CrazyDrill Titanium TK / TN

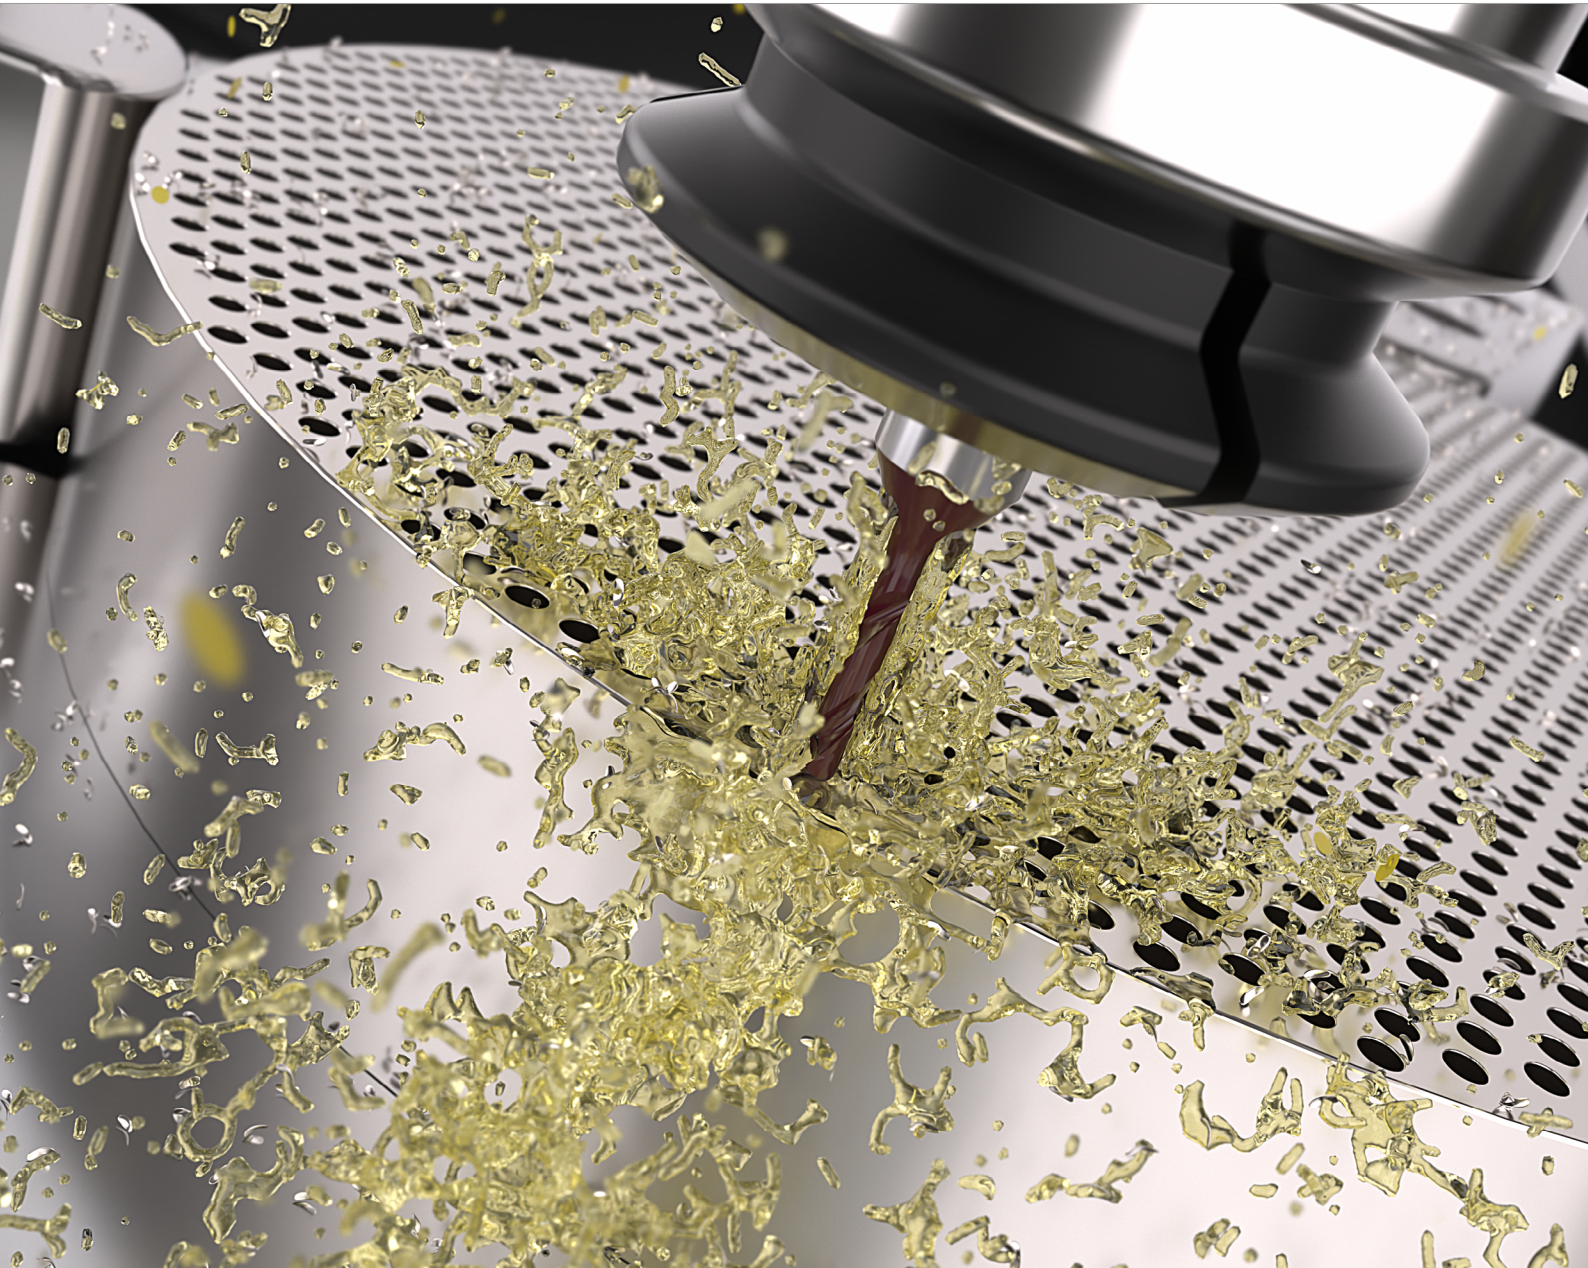


CRAZYDRILL™
by Mikron Tool
Titanium

MICRO-HIGH-PERFORMANCE DRILLING IN ALL GRADES OF TITANIUM



The trend towards miniaturization requires ever smaller high-performance tools that guarantee reliable processes and maximum precision. This applies in particular to the machining of titanium and its alloys, which are often very difficult to machine due to the specific material properties. The biggest machining challenges are:

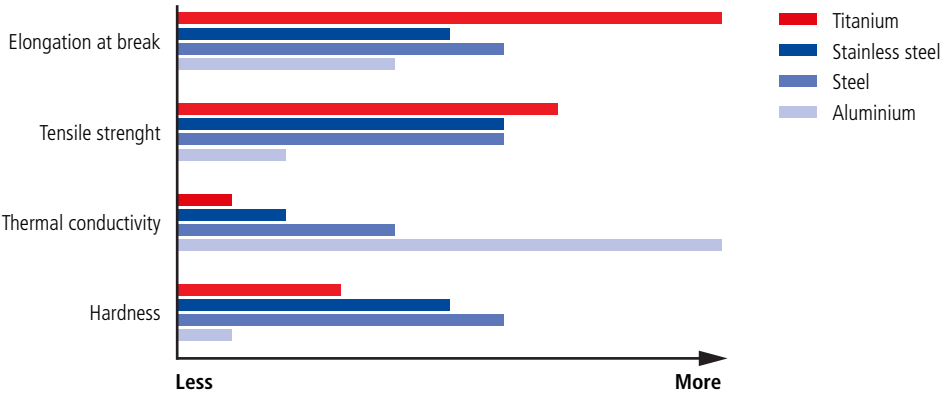

With the CrazyDrill Titanium TK / TN high-performance titanium drills, Mikron Tool is expanding its titanium drill program (previously from 1.0 to 6.35 mm) with micro drills in the diameter range from 0.2 to 2.0 mm. These can also be used reliably in machining scenarios with low internal cooling pressure or with external cooling.

Regrinding: This product is not suitable for regrinding.

Please note: You couldn't find your suitable version of the CrazyDrill Titanium TK / TN (diameter, length, cutting direction...)? Ask us about our customized versions!

CrazyDrill Titanium TK / TN

MICRO-HIGH-PERFORMANCE DRILLING IN ALL GRADES OF TITANIUM

1. Challenge


High thermal load

Material	Thermal conductivity
Aluminum	167 W/mK
Stainless steel	21 W/mK
Titanium alloy	7 W/mK


When drilling titanium, the high thermal load on the cutting edge poses a challenge. This leads to chipping of the cutting edge and increased tool wear. For drills larger than 1 mm and with a minimum coolant pressure of 40 bar, the most effective cooling technology involves twisted internal cooling channels that exit at the drill tip. However, for drill diameters starting from 0.2 to 1.0 mm, alternative cooling methods must be explored to ensure a stable and reliable drilling process.

Solution

Through shank coolant system

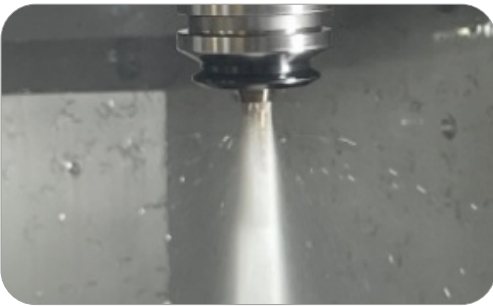


The patented coolant system integrated in the shank of the CrazyDrill Titanium TK enables reliable drilling with high feed rates at 15 bar coolant pressure. The tool life of the CrazyDrill Titanium TK also sets a new benchmark compared to its competitors. For applications without the option of internal cooling, Mikron Tool has developed the high-performance CrazyDrill Titanium TN micro drill, which has been consistently designed for external coolant supply.

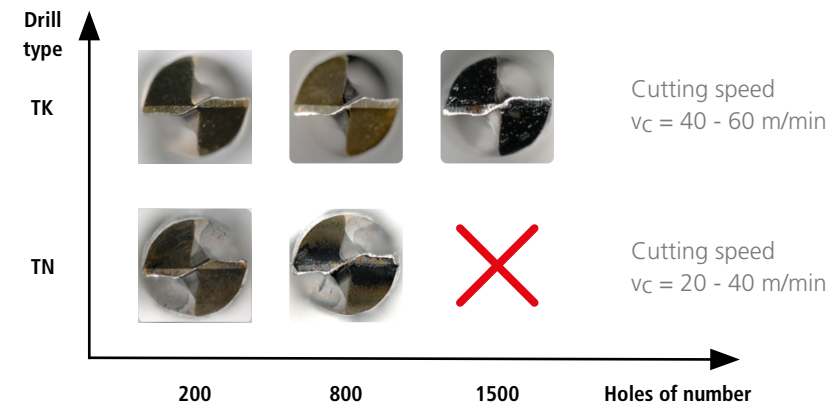

2. Challenge

Low machinability of Titanium

High-performance drilling of titanium materials is highly demanding. The machining behavior of titanium materials is shown in the diagram below in comparison with other materials. In order to drill titanium materials efficiently and reliably, not only is a special cutting geometry required, but all the geometry features must be adapted and balanced to the specific properties of titanium grades.

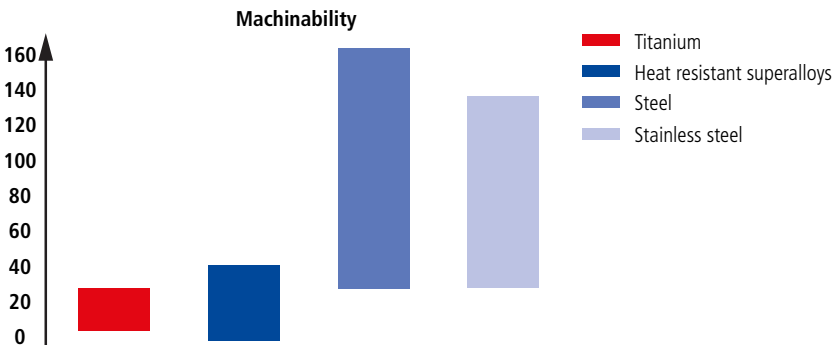


Solution

Specific cutting geometry for all grades of titanium

With the CrazyDrill Titanium, Mikron Tool has developed a high-performance drill that guarantees optimal drilling for both pure titanium and its alloys. This is made possible by a specifically designed cutting geometry and corresponding pecking drill processes, which keep chips short and enable a safe chip removal. The newly developed universal titanium drills CrazyDrill Titanium are suitable for all types of titanium and have the following advantages and properties:


- Excellent self-centering
- Highest process reliability
- Perfect chip evacuation
- Prevention of built-up edges and reduced material adhesion

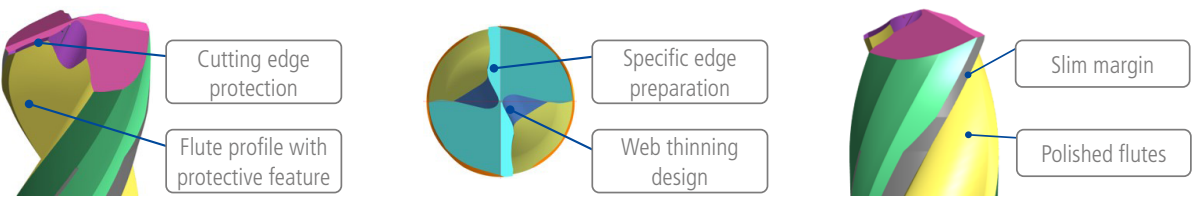

CrazyDrill Titanium TK / TN


MICRO-HIGH-PERFORMANCE DRILLING IN ALL GRADES OF TITANIUM

3. Challenge
Reduce high axial forces

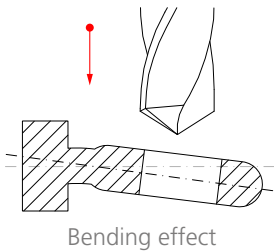

The cutting speed at the center of the drill is nearly zero, which leads to high axial forces. These forces have a stronger impact on process reliability in micro-drilling than in larger diameters or workpieces. The design of the cutting-tip geometry is therefore crucial in order to reduce the axial forces. A traditional cutting-tip geometry with a wide drill core generates high axial forces, which can lead to deformation during the drilling process on unstable, thin-walled workpieces. In addition, excessive axial force can cause undesirable deflection of the drill.

Solution
Specific titanium drill tip design

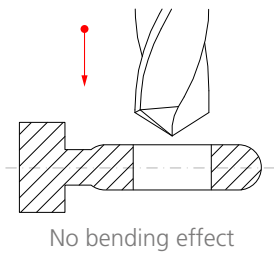


CrazyDrill Titanium TK / TN is provided with a specifically designed web thinning. In combination with a cutting geometry designed for titanium grades, the axial forces are significantly reduced. The result is a force reduction of 25% to 45%.

Example

	Competitor Ø2 mm - 3 x d		CrazyDrill Titanium TK Ø2 mm - 3 x d	
	Mean	Peak	Mean	Peak
Axial force Fz [N]	100	270	75	150

4. Challenge
High hole quality

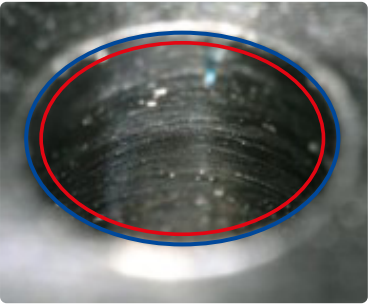


Requested diameter (i.e: Ø 2 mm)
Machined diameter (i.e: Ø 2.04 mm)

Titanium grades behave elastically during drilling. The material contracts again like rubber after the drill has entered it. This elastic behavior must be taken into account during drill development, because the drilled hole will adjust itself in the micrometer range immediately after the drilling process. The challenges are correspondingly high in terms of process reliability (jamming / breakage of the drill), accuracy in diameter, roundness and position, surface quality of the drill hole.

Solution
Titanium-specific drill design

A perfect and complete geometry optimization that is specifically designed for pure titanium and titanium alloys and ensures the best drilling results:

- Drill tip / web thinning → Low axial force → Good positioning & low deviation
- Cutting edge with protection → Stable cutting edges (no breakage) → Precise hole diameter
- Slim margin → Avoiding of material adhesion → Good surface quality

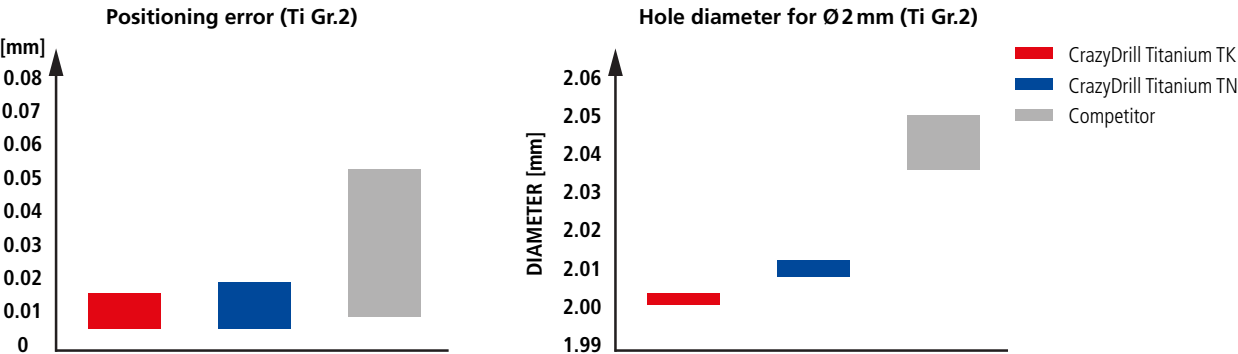

Your benefits

The most important features

- Specially designed cutting geometry for all grades of titanium
- Specially designed for machining conditions with a maximum cooling lubricant pressure of 15 bar or external cooling
- CrazyDrill Titanium TK: Efficient cooling system, thanks to patented through shank cooling channels
- Polished flutes for process-reliable chip evacuation
- Micro diameters range from Ø 0.2 to 2.0 mm

Your advantages

- Perfect performance for any titanium grade
- Possibility to machine with low pressure by spindle: min. 15 bar (CrazyDrill Titanium TK) or external cooling (CrazyDrill Titanium TN)
- Low cutting forces (axial, torque and bending)
- Perfect, process-reliable chip evacuation
- Ideal heat dissipation

Your benefits

- Excellent drilling quality
- High process reliability
- Up to 3 times longer tool life compared to the best competitors in the market
- Up to 2 times faster machining time compared to the best competitors in the market



Find out more!

Maximum performance guaranteed

EXAMPLE OF TITANIUM MACHINING IN COMPARISON

■ Example

Faster machining time

Machining: Drilling with pecks
Number of holes: 1'000
Drilling depth: 3 mm;
Coolant: Emulsion 8%



Pure titanium: 3.7035 / Ti Gr.2 / ASTM B348 **S2**

Tool: CrazyDrill Titanium TK
Diameter: 1.0 mm

Cutting data:

Conventional drill for titanium		CrazyDrill Titanium TK	
$v_c = 25 \text{ m/min}$	$f = 0.01 \text{ mm/rev}$	$v_c = 60 \text{ m/min}$	$f = 0.01 \text{ mm/rev}$
$Q_i = 0.5 \text{ mm}$	$Q_x = 0.5 \text{ mm}$	$Q_i = 1.0 \text{ mm}$	$Q_x = 1.0 \text{ mm}$

Results:

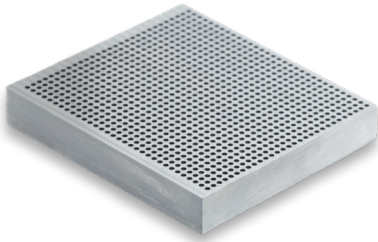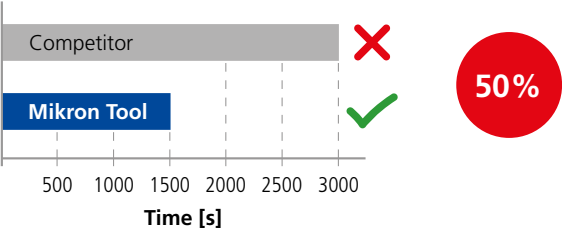


Type TN

- External cooling
- Coated




Type TK

- Integrated cooling
- Coated

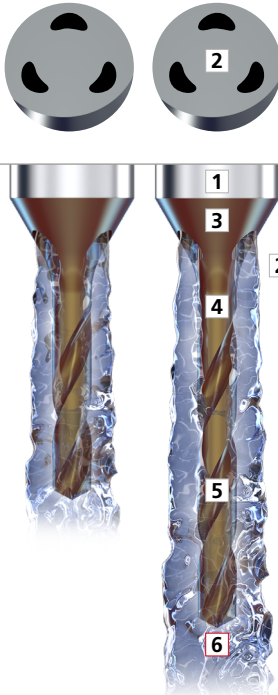



- 1 | SHAFT**
The robust carbide shaft allows stable drilling without vibrations.
- 2 | NEW COOLING CONCEPT**
The integrated coolant through the shank provides efficient cooling to the drill tip. The result is a reliable process and an increased productivity.
- 3 | CARBIDE**
The carbide especially developed for CrazyDrill Titanium fulfills perfectly all requirements for the machining of titanium's grades.
- 4 | COATING**
The high-performance coating eXedur SNP is heat and wear-resistant, prevents build-up edges and promotes uniform chip flushing. A long tool life is guaranteed.
- 5 | POLISHED FLUTES**
The polished flutes promote less friction and uniform chip evacuation.
- 6 | CUTTING GEOMETRY**
The drill point and outer profile geometry is specially developed for all titanium grades to achieve:
 - high cutting-edge stability
 - self-centering
 - less material adhesion and build-up edges

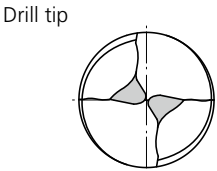

Type TK 3 x d / 6 x d





DRILLING WITH INTEGRATED COOLING

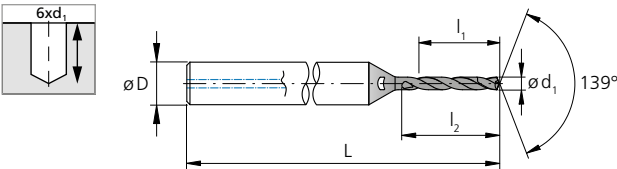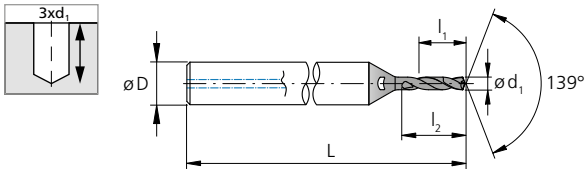

Type TN 3 x d / 6 x d



DRILLING WITH EXTERNAL COOLING

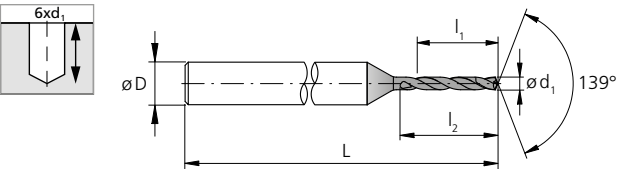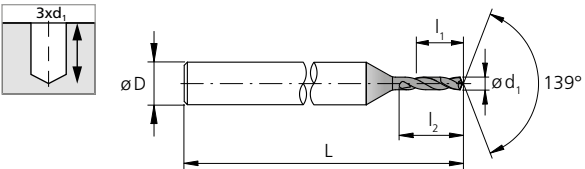

Carbide



139°

Z2



eXedur SNP

Ø d₁

0.1 - 3.0 mm

Tolerance

+ 0.006 mm
0

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
0.20		0.60	1.0	3	38	2.CD.030020.TK	■
0.25		0.75	1.2	3	38	2.CD.030025.TK	■
0.30		0.90	1.4	3	38	2.CD.030030.TK	■
0.35		1.05	1.7	3	38	2.CD.030035.TK	■
0.396	1/64	1.19	1.9	3	38	2.CD.030F164.TK	■
0.40		1.20	1.9	3	38	2.CD.030040.TK	■
0.45		1.35	2.2	3	42	2.CD.030045.TK	■
0.50		1.50	2.4	3	42	2.CD.030050.TK	■
0.55		1.65	2.6	3	42	2.CD.030055.TK	■
0.60		1.80	2.9	3	42	2.CD.030060.TK	■
0.65		1.95	3.1	3	45	2.CD.030065.TK	■
0.70		2.10	3.4	3	45	2.CD.030070.TK	■
0.75		2.25	3.6	3	45	2.CD.030075.TK	■
0.793	1/32	2.38	3.8	3	45	2.CD.030F132.TK	■
0.80		2.40	3.8	3	45	2.CD.030080.TK	■
0.85		2.55	4.1	3	45	2.CD.030085.TK	■
0.90		2.70	4.3	3	45	2.CD.030090.TK	■
0.95		2.85	4.6	3	48	2.CD.030095.TK	■
1.00		3.00	4.8	3	48	2.CD.030100.TK	■
1.05		3.15	5.0	3	48	2.CD.030105.TK	■
1.10		3.30	5.3	3	48	2.CD.030110.TK	■
1.15		3.45	5.5	3	48	2.CD.030115.TK	■
1.20		3.60	5.8	3	48	2.CD.030120.TK	■
1.25		3.75	6.0	4	52	2.CD.030125.TK	■
1.30		3.90	6.2	4	52	2.CD.030130.TK	■
1.35		4.05	6.5	4	52	2.CD.030135.TK	■
1.40		4.20	6.7	4	52	2.CD.030140.TK	■
1.45		4.35	7.0	4	52	2.CD.030145.TK	■
1.50		4.50	7.2	4	52	2.CD.030150.TK	■
1.55		4.65	7.4	4	55	2.CD.030155.TK	■
1.587	1/16	4.76	7.6	4	55	2.CD.030F116.TK	■
1.60		4.80	7.7	4	55	2.CD.030160.TK	■
1.65		4.95	7.9	4	55	2.CD.030165.TK	■
1.70		5.10	8.2	4	55	2.CD.030170.TK	■
1.75		5.25	8.4	4	55	2.CD.030175.TK	■
1.80		5.40	8.6	4	55	2.CD.030180.TK	■
1.85		5.55	8.9	4	55	2.CD.030185.TK	■
1.90		5.70	9.1	4	55	2.CD.030190.TK	■
1.95		5.85	9.4	4	55	2.CD.030195.TK	■
2.00		6.00	9.6	4	55	2.CD.030200.TK	■

■ Stock item

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
0.20		1.20	1.6	3	38	2.CD.060020.TK	■
0.25		1.50	2.0	3	38	2.CD.060025.TK	■
0.30		1.80	2.3	3	38	2.CD.060030.TK	■
0.35		2.10	2.7	3	38	2.CD.060035.TK	■
0.396	1/64	2.38	3.1	3	38	2.CD.060F164.TK	■
0.40		2.40	3.1	3	38	2.CD.060040.TK	■
0.45		2.70	3.5	3	42	2.CD.060045.TK	■
0.50		3.00	3.9	3	42	2.CD.060050.TK	■
0.55		3.30	4.3	3	42	2.CD.060055.TK	■
0.60		3.60	4.7	3	42	2.CD.060060.TK	■
0.65		3.90	5.1	3	45	2.CD.060065.TK	■
0.70		4.20	5.5	3	45	2.CD.060070.TK	■
0.75		4.50	5.9	3	45	2.CD.060075.TK	■
0.793	1/32	4.76	6.2	3	45	2.CD.060F132.TK	■
0.80		4.80	6.2	3	45	2.CD.060080.TK	■
0.85		5.10	6.6	3	45	2.CD.060085.TK	■
0.90		5.40	7.0	3	45	2.CD.060090.TK	■
0.95		5.70	7.4	3	48	2.CD.060095.TK	■
1.00		6.00	7.8	3	48	2.CD.060100.TK	■
1.05		6.30	8.2	3	48	2.CD.060105.TK	■
1.10		6.60	8.6	3	48	2.CD.060110.TK	■
1.15		6.90	9.0	3	48	2.CD.060115.TK	■
1.20		7.20	9.4	3	48	2.CD.060120.TK	■
1.25		7.50	9.8	4	52	2.CD.060125.TK	■
1.30		7.80	10.1	4	52	2.CD.060130.TK	■
1.35		8.10	10.5	4	52	2.CD.060135.TK	■
1.40		8.40	10.9	4	52	2.CD.060140.TK	■
1.45		8.70	11.3	4	52	2.CD.060145.TK	■
1.50		9.00	11.7	4	52	2.CD.060150.TK	■
1.55		9.30	12.1	4	55	2.CD.060155.TK	■
1.587	1/16	9.52	12.4	4	55	2.CD.060F116.TK	■
1.60		9.60	12.5	4	55	2.CD.060160.TK	■
1.65		9.90	12.9	4	55	2.CD.060165.TK	■
1.70		10.20	13.3	4	55	2.CD.060170.TK	■
1.75		10.50	13.7	4	55	2.CD.060175.TK	■
1.80		10.80	14.0	4	55	2.CD.060180.TK	■
1.85		11.10	14.4	4	55	2.CD.060185.TK	■
1.90		11.40	14.8	4	55	2.CD.060190.TK	■
1.95		11.70	15.2	4	55	2.CD.060195.TK	■
2.00		12.00	15.6	4	55	2.CD.060200.TK	■

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
0.20		0.60	1.0	3	40	2.CD.030020.TN	Δ
0.25		0.75	1.2	3	40	2.CD.030025.TN	Δ
0.30		0.90	1.4	3	40	2.CD.030030.TN	Δ
0.35		1.05	1.7	3	40	2.CD.030035.TN	Δ
0.396	1/64	1.19	1.9	3	40	2.CD.030F164.TN	Δ
0.40		1.20	1.9	3	40	2.CD.030040.TN	Δ
0.45		1.35	2.2	3	45	2.CD.030045.TN	Δ
0.50		1.50	2.4	3	45	2.CD.030050.TN	Δ
0.55		1.65	2.6	3	45	2.CD.030055.TN	Δ
0.60		1.80	2.9	3	45	2.CD.030060.TN	Δ
0.65		1.95	3.1	3	45	2.CD.030065.TN	Δ
0.70		2.10	3.4	3	45	2.CD.030070.TN	Δ
0.75		2.25	3.6	3	45	2.CD.030075.TN	Δ
0.793	1/32	2.38	3.8	3	45	2.CD.030F132.TN	Δ
0.80		2.40	3.8	3	45	2.CD.030080.TN	Δ
0.85		2.55	4.1	3	45	2.CD.030085.TN	Δ
0.90		2.70	4.3	3	45	2.CD.030090.TN	Δ
0.95		2.85	4.6	3	50	2.CD.030095.TN	Δ
1.00		3.00	4.8	3	50	2.CD.030100.TN	Δ
1.05		3.15	5.0	3	50	2.CD.030105.TN	Δ
1.10		3.30	5.3	3	50	2.CD.030110.TN	Δ
1.15		3.45	5.5	3	50	2.CD.030115.TN	Δ
1.20		3.60	5.8	3	50	2.CD.030120.TN	Δ
1.25		3.75	6.0	3	50	2.CD.030125.TN	Δ
1.30		3.90	6.2	3	50	2.CD.030130.TN	Δ
1.35		4.05	6.5	3	50	2.CD.030135.TN	Δ
1.40		4.20	6.7	3	50	2.CD.030140.TN	Δ
1.45		4.35	7.0	3	50	2.CD.030145.TN	Δ
1.50		4.50	7.2	3	50	2.CD.030150.TN	Δ
1.55		4.65	7.4	3	50	2.CD.030155.TN	Δ
1.587	1/16	4.76	7.6	3	50	2.CD.030F116.TN	Δ
1.60		4.80	7.7	3	50	2.CD.030160.TN	Δ
1.65		4.95	7.9	3	50	2.CD.030165.TN	Δ
1.70		5.10	8.2	3	50	2.CD.030170.TN	Δ
1.75		5.25	8.4	3	50	2.CD.030175.TN	Δ
1.80		5.40	8.6	3	50	2.CD.030180.TN	Δ
1.85		5.55	8.9	3	50	2.CD.030185.TN	Δ
1.90		5.70	9.1	3	50	2.CD.030190.TN	Δ
1.95		5.85	9.4	3	50	2.CD.030195.TN	Δ
2.00		6.00	9.6	3	50	2.CD.030200.TN	Δ

Δ Delivery term upon request, mininum purchase order quantity 3 pcs.

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
0.20		1.20	1.6	3	40	2.CD.060020.TN	Δ
0.25		1.50	2.0	3	40	2.CD.060025.TN	Δ
0.30		1.80	2.3	3	40	2.CD.060030.TN	Δ
0.35		2.10	2.7	3	40	2.CD.060035.TN	Δ
0.396	1/64	2.38	3.1	3	40	2.CD.060F164.TN	Δ
0.40		2.40	3.1	3	40	2.CD.060040.TN	Δ
0.45		2.70	3.5	3	45	2.CD.060045.TN	Δ
0.50		3.00	3.9	3	45	2.CD.060050.TN	Δ
0.55		3.30	4.3	3	45	2.CD.060055.TN	Δ
0.60		3.60	4.7	3	45	2.CD.060060.TN	Δ
0.65		3.90	5.1	3	45	2.CD.060065.TN	Δ
0.70		4.20	5.5	3	45	2.CD.060070.TN	Δ
0.75		4.50	5.9	3	45	2.CD.060075.TN	Δ
0.793	1/32	4.76	6.2	3	45	2.CD.060F132.TN	Δ
0.80		4.80	6.2	3	45	2.CD.060080.TN	Δ
0.85		5.10	6.6	3	45	2.CD.060085.TN	Δ
0.90		5.40	7.0	3	45	2.CD.060090.TN	Δ
0.95		5.70	7.4	3	50	2.CD.060095.TN	Δ
1.00		6.00	7.8	3	50	2.CD.060100.TN	Δ
1.05		6.30	8.2	3	50	2.CD.060105.TN	Δ
1.10		6.60	8.6	3	50	2.CD.060110.TN	Δ
1.15		6.90	9.0	3	50	2.CD.060115.TN	Δ
1.20		7.20	9.4	3	50	2.CD.060120.TN	Δ
1.25		7.50	9.8	3	50	2.CD.060125.TN	Δ
1.30		7.80	10.1	3	50	2.CD.060130.TN	Δ
1.35		8.10	10.5	3	50	2.CD.060135.TN	Δ
1.40		8.40	10.9	3	50	2.CD.060140.TN	Δ
1.45		8.70	11.3	3	50	2.CD.060145.TN	Δ
1.50		9.00	11.7	3	50	2.CD.060150.TN	Δ
1.55		9.30	12.1	3	50	2.CD.060155.TN	Δ
1.587	1/16	9.52	12.4	3	50	2.CD.060F116.TN	Δ
1.60		9.60	12.5	3	50	2.CD.060160.TN	Δ
1.65		9.90	12.9	3	50	2.CD.060165.TN	Δ
1.70		10.20	13.3	3	50	2.CD.060170.TN	Δ
1.75		10.50	13.7	3	50	2.CD.060175.TN	Δ
1.80		10.80	14.0	3	50	2.CD.060180.TN	Δ
1.85		11.10	14.4	3	50	2.CD.060185.TN	Δ
1.90		11.40	14.8	3	50	2.CD.060190.TN	Δ
1.95		11.70	15.2	3	50	2.CD.060195.TN	Δ
2.00		12.00	15.6	3	50	2.CD.060200.TN	Δ

TK - 3 x d - 6 x d



RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

P	☒	N	☒	S ₃	☒
M	☒	S ₁	☒	H ₁	☒
K	☒	S ₂	●	H ₂	☒

DRILLING WITH INTERNAL COOLING | CUTTING DATA OVERVIEW



										f [mm/rev]																											
Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c [m/min]		Ød1																														
							0.2 - 0.4 mm 1/64"				0.5 - 0.9 mm 1/32"				1.0 - 1.2 mm				1.3 - 1.4 mm				1.5 - 1.8 mm 1/32"				1.9 - 2.0 mm										
					Mid	High	Mid	High	Q _i	Q _x	Mid	High	Q _i	Q _x	Mid	High	Q _i	Q _x	Mid	High	Q _i	Q _x	Mid	High	Q _i	Q _x	Mid	High	Q _i	Q _x							
S ₂	Titanium pure	3.7035	Gr.2	ASTM B348 / F67	30	60				0.002	0.004	1.0xd1	0.5 - 1.0 xd1	0.005	0.009	1.5xd1	1.0xd1	0.010	0.012	2.0xd1	1.0xd1	0.013	0.014	2.0xd1	1.0xd1	0.015	0.018	3.0xd1	1.0xd1	0.019	0.020	3.0xd1	1.0xd1				
		3.7065	Gr.4	ASTM B348 / F68																																	
	Titanium alloys	3.7165	TiAl6V4	ASTM B348 / F136																																	
		9.9367	TiAl6Nb7	ASTM F1295																																	

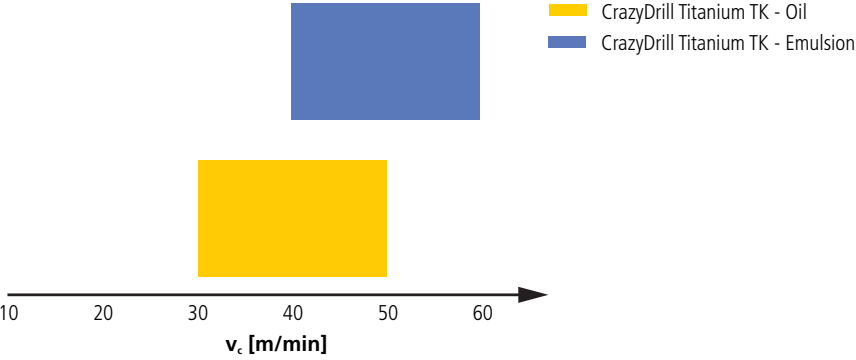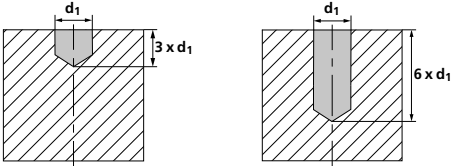

TN - 3 x d - 6 x d




RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

P	N	S ₃	☒
M	S ₁	H ₁	☒
K	S ₂	H ₂	☒

DRILLING WITH EXTERNAL COOLING | CUTTING DATA OVERVIEW



										f [mm/rev]																											
Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c [m/min]		Ød1																														
					Mid	High	0.2 - 0.4 mm 1/64"				0.5 - 0.9 mm 1/32"				1.0 - 1.2 mm				1.3 - 1.4 mm				1.5 - 1.8 mm 1/32"				1.9 - 2.0 mm										
							Mid	High	Q ₁	Q _x	Mid	High	Q ₁	Q _x	Mid	High	Q ₁	Q _x	Mid	High	Q ₁	Q _x	Mid	High	Q ₁	Q _x	Mid	High	Q ₁	Q _x							
S ₂	Titanium pure	3.7035	Gr.2	ASTM B348 / F67	20	50					0.002	0.004	0.5 - 1.0 xd1	0.5 - 1.0 xd1	0.005	0.009	1.0 - 1.5 xd1	1.0xd1	0.010	0.012	1.5 - 2.0 xd1	1.0xd1	0.013	0.014	1.5 - 2.0 xd1	1.0xd1	0.015	0.018	2.0 - 3.0 xd1	1.0xd1	0.019	0.020	2.0 - 3.0 xd1	1.0xd1			
		3.7065	Gr.4	ASTM B348 / F68																																	
	Titanium alloys	3.7165	TiAl6V4	ASTM B348 / F136																																	
		9.9367	TiAl6Nb7	ASTM F1295																																	

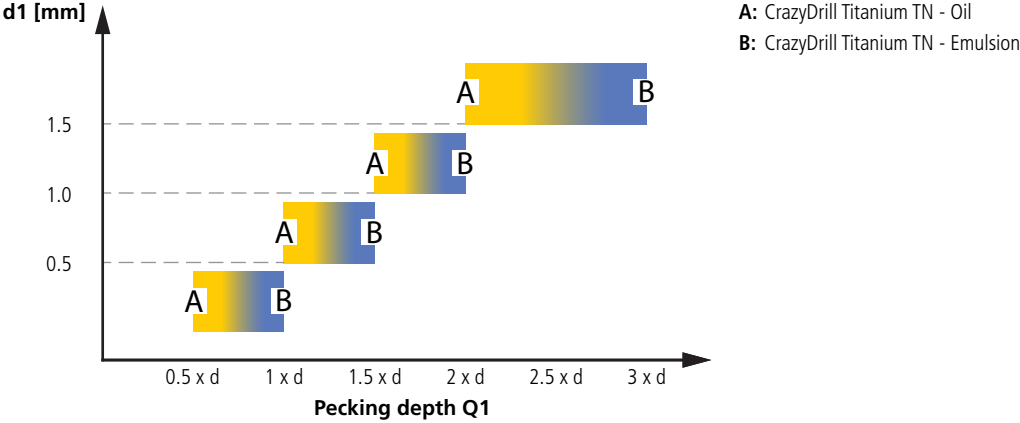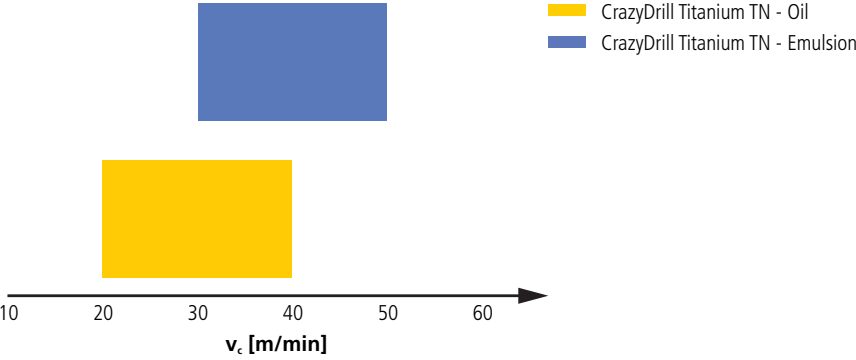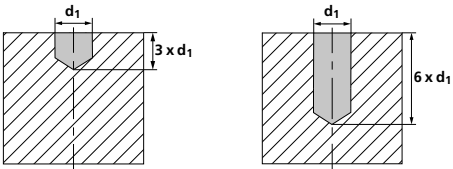

Drilling process CrazyDrill Titanium

PRECISE AND EFFICIENT DRILLING FROM Ø 0.2 MM

Coolant type, pressure and filtration

Coolant: For best results, Mikron Tool recommends the use of emulsion of 8% or more with EP-Additives (Extreme-Pressure-Additives) as coolant. Alternatively, cutting oil can be used as well.

Filter: The large cooling channels allow a standard filter with filter quality of ≤ 0.05 mm.

For tools with external cooling no filtration parameters have to be considered concerning filter.

Coolant pressure: To ensure a reliable drilling process using tools with through-tool cooling the following minimal pressures are needed (see chart). Higher pressures are needed for smaller drill size diameters. High pressure is generally better for the cooling and flushing effect.

Revolution	[rev/min]	≤ 10'000	> 10'000
Minimal pressure	[bar]	15	30

For tools with external cooling no specific parameters have to be considered concerning coolant pressure. But it must be ensured that the coolant is conducted directly to the drill tip, thus cooling and lubricating the drill perfectly and flushing away the chips.

Drilling process CrazyDrill Titanium

PRECISE AND EFFICIENT DRILLING FROM Ø0.2 MM

CrazyDrill Titanium TK / TN 3 x d

Because of the high degree of self-centering capability, CrazyDrill Titanium TK / TN 3 x d can be used on on regular, irregular, straight and rough surfaces without an hole preparation.

CrazyDrill Titanium TK / TN 6 x d

Because of the high degree of self-centering capability, CrazyDrill Titanium TK / TN 6 x d can be used on on regular, irregular, straight and rough surfaces without an hole preparation.

Higher requirements: For irregular respectively rough or inclined surfaces or for the highest degree of position accuracy Mikron Tool recommends:

- **CrazyDrill Twicenter** as center drill,
- **CrazyDrill Crosspilot** as pilot drill for inclined surfaces

Centering / pilot drilling and drilling

Centering with CrazyDrill Twicenter is the perfect combination for a precise hole in terms of position accuracy and a stable machining process.

Pilot drilling with CrazyDrill Titanium TK 3 x d is the perfect preparation for accurate drilling (position and alignment accuracy) and stable machining process for deep-hole drilling with CrazyDrill Flex Titanium ATK.

The pilot drill CrazyDrill Crosspilot does the same when drilling on inclined surfaces.
The drilling quality is also guaranteed due to predetermined tool tolerances.

DRILLING PROCESS


Drilling according DIN 66025 / PAL

G83 deep-drilling cycle with chip breaking and chip removal pecks

Q = depth of the respective peck


1 | CENTERING OR PILOT DRILLING

- With CrazyDrill Twicenter (irregular or rough surfaces) or CrazyDrill Crosspilot (inclined surfaces) for version 6 x d.

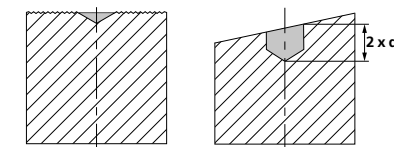


2 | DRILLING

- With CrazyDrill Titanium up to maximum drilling depth Q_1 in one step, followed by pecks to remove chips.

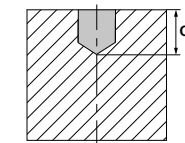

- Further pecks Q_x according to cutting data table, followed by pecks to remove chips.

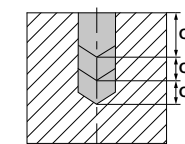

Note:


Between pecks, take the drill completely out from the bore. After the drill reached desired cutting depth, return at increased feed rate (or in case of perfect conditions rapid traverse) to safety position.

Mastercam

News: Tool libraries of all Mikron Tool catalog products are available on Mastercam's Tech Exchange, ready for download!

PATENTED CrazyDrill Flex

NEW

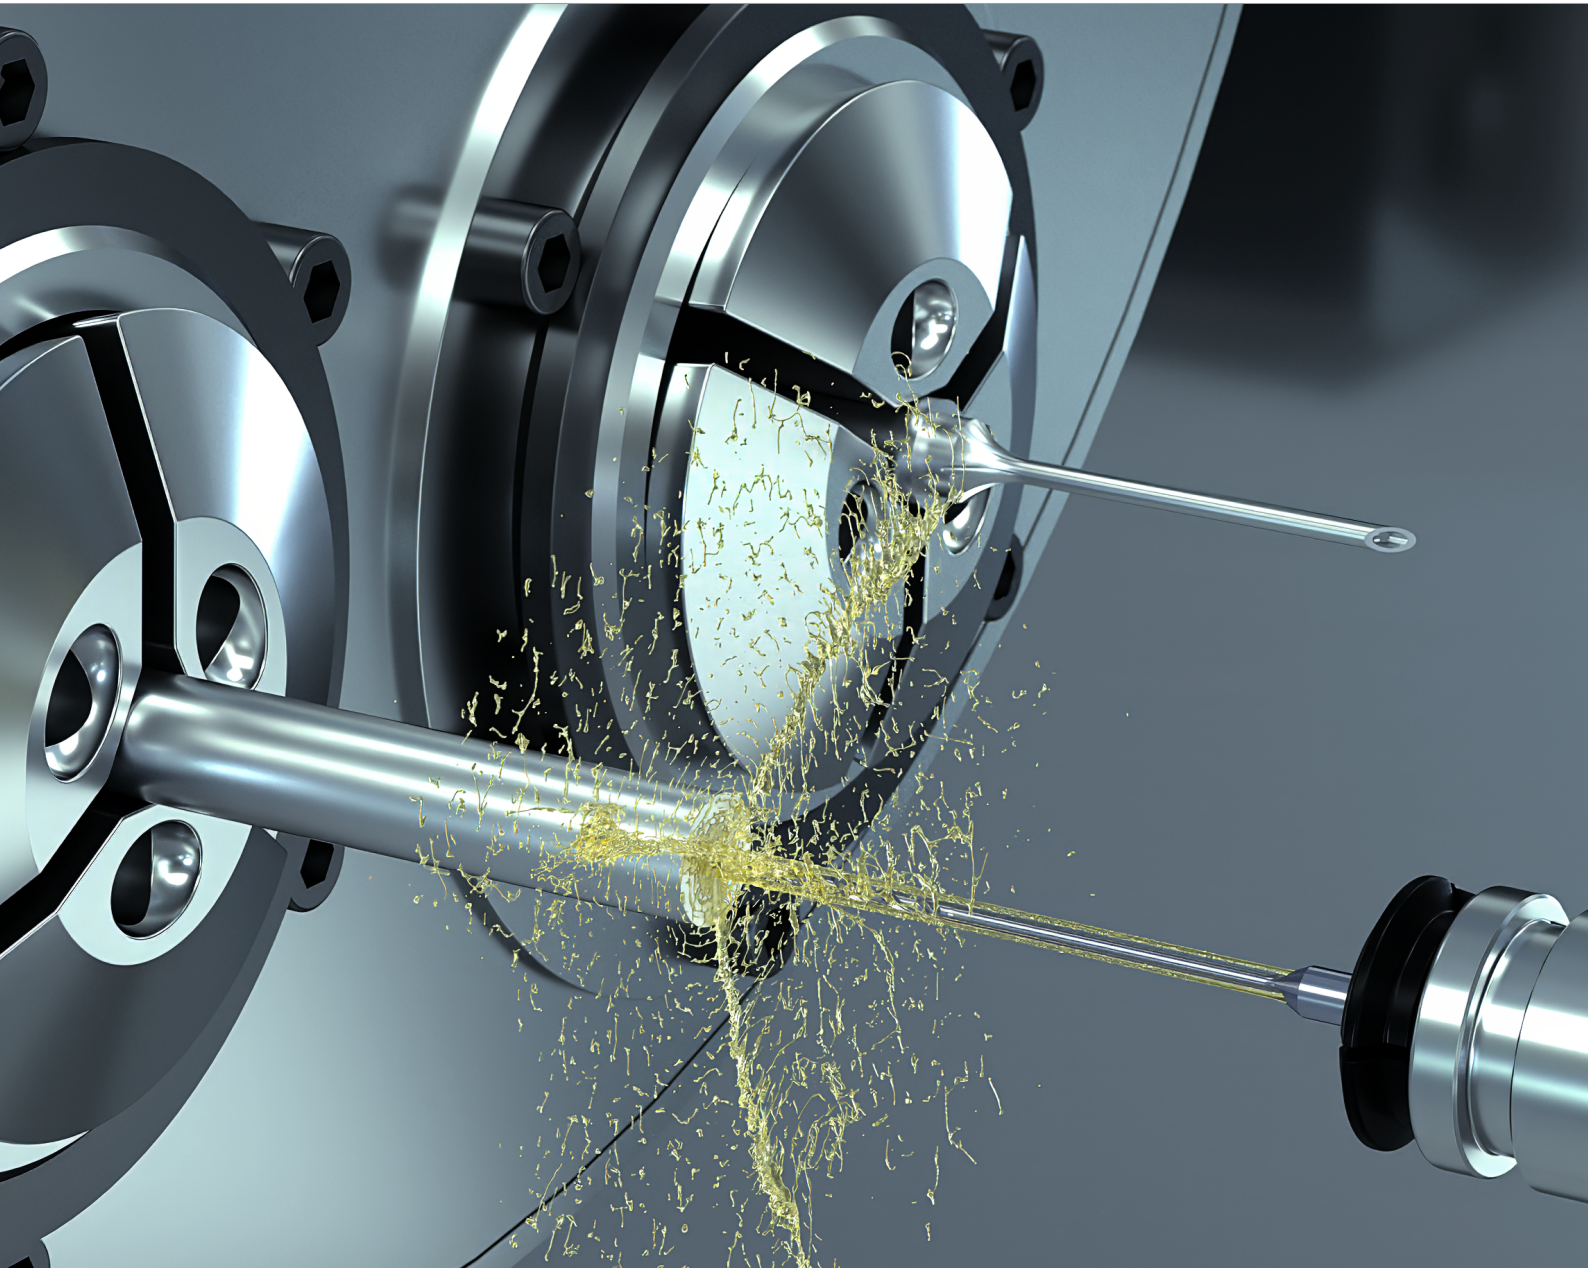

FLEXIBILITY AND SOLID CARBIDE: NO CONTRARIETY



With CrazyDrill Flex, Mikron Tool offers a solid carbide drill designed for deep-hole drilling up to 50 x d. Diameter range from 0.1 to 2.0 mm in two versions:

- **CrazyDrill Flex Titanium:** Specifically engineered cutting geometry for peck drilling in pure titanium and copper. The 30 x d variant uses external cooling, while the 50 x d variant features a through-coolant channel integrated into the shank.
- **CrazyDrill Flex Titanium ATK:** The new Mikron Tool high-performance drill ensures optimal deep-hole drilling in alloyed titanium. Its specially designed cutting geometry and peck drilling process keep chips short and allow safe chip evacuation. Both the 30 x d and 50 x d variants feature a through-coolant channel integrated into the shank.

We recommend for all verions a pilot drilling with:

- **CrazyDrill Flexpilot Titanium** for CrazyDrill Flex Titanium
- **CrazyDrill Titanium TK** for CrazyDrill Flex Titanium ATK
- **CrazyDrill Crosspilot** on inclined surfaces for both versions

Regrinding: This product is not suitable for regrinding.

Please note: You couldn't find your suitable version of the CrazyDrill Flex (diameter, length, cutting direction...)? Ask us about our customized versions!


NEW

CrazyDrill Flex

MICRO-HIGH-PERFORMANCE DRILLING IN ALL GRADES OF TITANIUM

1. Challenge

Poor chip formation

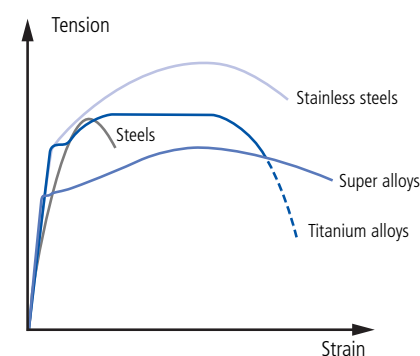


Titanium's ductility, or its ability to deform plastically without breaking, makes it a challenging material to machine. When drilling, titanium tends to bend and form continuous chips rather than breaking into smaller pieces. This can lead to poor chip control, clogging drill jamming, and increased cutting forces.

Solution

Special flute profile - example CrazyDrill Flex Titanium ATK


A special flute profile with protective feature ensures good chip breaking and efficient chip removal. Moreover, chips are quickly flushed away of the cutting zone thanks to the patented coolant system integrated in the shank. This enables reliable drilling with high feed rates at 15 bar coolant pressure. CrazyDrill Flex Titanium's tool life sets a new benchmark compared to the competition.

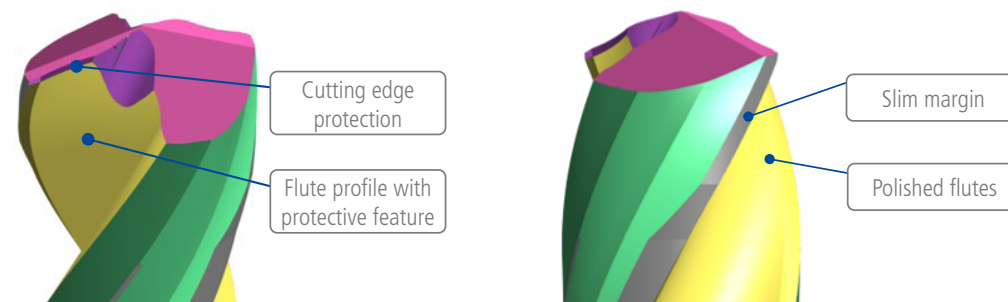

2. Challenge

Misalignment & runout

Misalignment and runout are common issues in deep-hole drilling operations with solid carbide drills. Even minimal alignment deviations between tool and guiding hole lead to uneven cutting forces and excessive wear. Runout further amplifies this by causing the drill to wobble during rotation, reducing precision and stability. These factors together compromise hole quality and increase mechanical stress on the tool. As a result, premature unexpected tool breakage is a common and costly consequence.

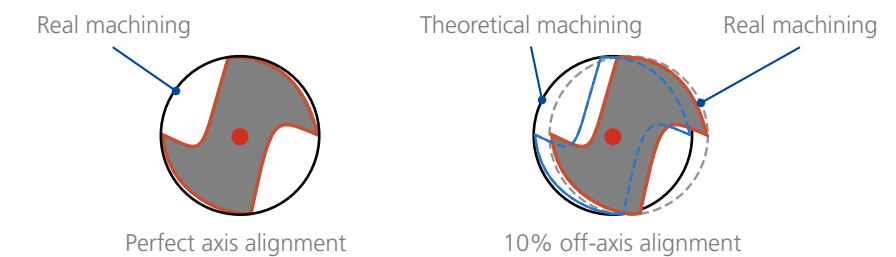

Solution

Patented drill center piece: flexibility and stability


A flexible center piece with a reduced cross-section ensures elasticity (flection) and provides at the same time higher rigidity (torsion/compression) compared to drilling with a through flute. The micro deep-hole drill can easily compensate misalignment of up to 40% of its diameter and runout issues without breaking off. Until now, this was only possible with HSS tools.



NEW CrazyDrill Flex


MICRO-HIGH-PERFORMANCE DRILLING IN ALL GRADES OF TITANIUM

3. Challenge
Drill breakage due to excessive axial forces

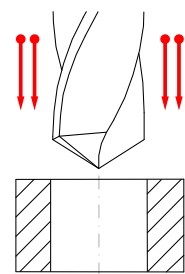


The cutting speed at the center of the drill is nearly zero, which leads to high axial forces. These forces have a stronger impact on process reliability in micro deep-hole drilling than in larger diameters or workpieces. The design of the cutting-tip geometry is therefore crucial in order to reduce the axial forces. A traditional cutting-tip geometry with a wide drill core generates high axial forces, which can lead to drill instability and deflection. This can lead to unexpected tool failure.

Solution
Specific titanium drill tip design to reduce axial forces

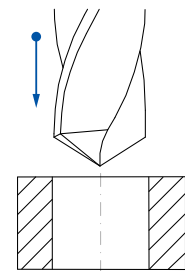


CrazyDrill Flex Titanium ATK is provided with a specifically designed web thinning that avoids drill jamming, material adhesion, and build-up edges. In combination with a cutting geometry designed for alloyed titanium, the axial forces are significantly reduced. The result is a force reduction of 25% to 45%.

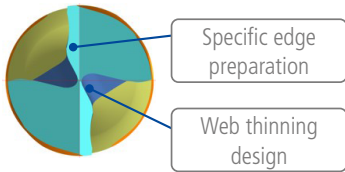

Example

	Competitor Ø2mm		CrazyDrill Flex Titanium ATK Ø2mm	
	Mean	Peak	Mean	Peak
Axial force Fz [N]	100	270	75	150

4. Challenge
Poor hole straightness & deviation

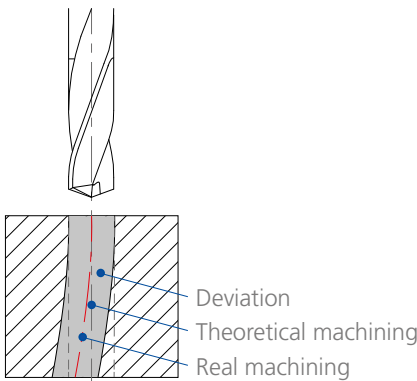


Poor hole straightness and deviation are common challenges in deep drilling of titanium with solid carbide drills. The high strength, elasticity of titanium, and inadequate guidance can cause the drill to wander, especially at greater depths. Deviation causes the hole to drift from its intended path, leading to dimensional inaccuracies. This not only affects the functionality of the final component but also increases the risk of tool breakage.

Solution
Specific titanium drill design

A perfect and complete geometry optimization that is specifically designed for pure titanium and titanium alloys and ensures the best drilling results:

- Drill tip / web thinning → Low axial forces → Good positioning & low deviation
- Cutting edge with protection → Stable cutting edges (no breakage) → Precise hole diameter
- Patented drill center → Offset & runout compensation → Low deviation

Deviation chart

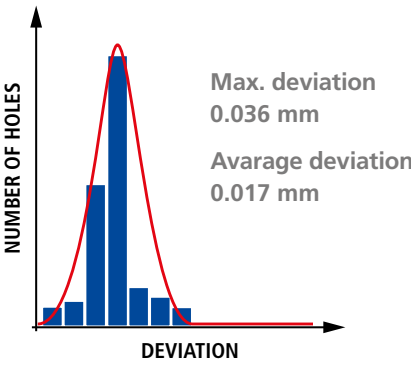

Material: Ti Gr.5 / 3.7165 / ASTM F136;
Diameter: 0.5 mm;
Drilling depth: 50 x d;
Total number of holes: 50;
Coolant: cutting oil;
Cutting data: $v_c = 20$ m/min; $f = 0.005$ mm/rev; $Q_1 = 1.5$ mm; $Q_x = 0.25$ mm;

Your benefits

The most important features

- Two specific geometries:
 - CrazyDrill Flex Titanium for pure titanium
 - CrazyDrill Flex Titanium ATK for titanium alloys
- Efficient cooling system, thanks to patented through shank cooling channels
- Micro diameters range from Ø 0.1 to 2.0 mm with drilling depth up to 50 x d

Your advantages

- Perfect performance for any titanium grade
- Possibility to machine with low pressure: min. 15 bar
- Low cutting forces (axial, torque and bending)
- Thanks to the flexible center piece, CrazyDrill Flex is just as flexible as HSS, yet with longer tool life
- Ideal heat dissipation

Your benefits

- Excellent drilling quality
- High process reliability: even with 40% x d misalignment or runout issue
- Up to 10 times faster than gun drill or EDM
- No need to invest in expensive deep-hole drilling machines



Find out more!

PATENTED			Titanium		Titanium ATK		NEW	
			3 x d	30 x d	50 x d	30 x d	50 x d	
			Integrated / External cooling Uncoated Ø0.1 - 1.2 mm For pure titanium			Integrated cooling Uncoated Ø0.3 - 2.0 mm For titanium alloy		
			2			2		
			1 2 3 4 5 6			1 2 3 4 5 6		
Page 36			Page 38		Page 40		Page 42	
							Page 44	

- 1

SHAFT

The sturdy carbide shaft guarantees high circular accuracy and thus top drilling precision.
- 2

COOLING

All 50 x d versions as well as the 30 x d version for CrazyDrill Flex Titanium ATK have integrated coolant through the shank. These guarantee efficient cooling of the cutting edges from just 15 bar. The special design and shape produce a concentrated jet even at high speeds, which guarantees regular and significant cooling of the drill tip.
- 3

CENTER PIECE: FLEXIBILITY AND STABILITY - PATENTED

A flexible center piece with a reduced cross-section ensures elasticity (flection) and provides at the same time higher rigidity (torsion/ compression) compared to drilling with a through flute. The micro deep-hole drill can easily compensate center offsets of up to 40% of its diameter without breaking off. Until now, this was only possible with HSS tools.
- 4

SOLID CARBIDE

The fine-grained solid carbide grade developed for the CrazyDrill Flex is very tough and resistant to heat shock, thus easily meeting the requirements for the machining of titanium pure and alloye.
- 5

FLUTES GEOMETRY

The flutes geometry is adapted to the materials machined. Good chip breaking and quick chip removal are guaranteed.
- 6


CUTTING GEOMETRY

Two material specific tip geometries have been developed for:

Pure titanium

Alloyed titanium


They guarantee high cutting stability, self-centering, short chips, less material adhesion and build-up edges. Thanks to the clever web thinning, less penetration force is required when drilling.

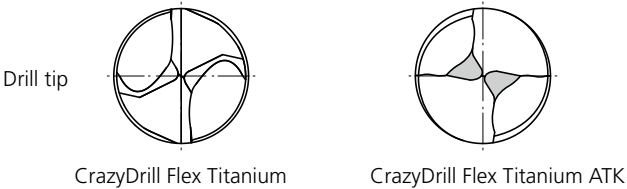

Titanium - 3 x d

For Pure Titanium	Carbide			Z2	Uncoated	
				Ø d ₁	0.1 - 3.0 mm	
				Tolerance	+ 0.003 mm 0	

DRILLING WITH EXTERNAL COOLING

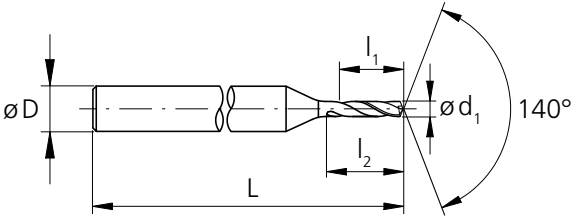

d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]		
0.10	0.30	0.5	3	40	2.PFT.010.0	■
0.11	0.33	0.6	3	40	2.PFT.011.0	Δ
0.12	0.36	0.6	3	40	2.PFT.012.0	Δ
0.13	0.39	0.7	3	40	2.PFT.013.0	Δ
0.14	0.42	0.7	3	40	2.PFT.014.0	Δ
0.15	0.45	0.8	3	40	2.PFT.015.0	■
0.16	0.48	0.8	3	40	2.PFT.016.0	Δ
0.17	0.51	0.9	3	40	2.PFT.017.0	Δ
0.18	0.54	0.9	3	40	2.PFT.018.0	Δ
0.19	0.57	1.0	3	40	2.PFT.019.0	Δ
0.20	0.60	1.0	3	40	2.PFT.020.0	■
0.21	0.63	1.1	3	40	2.PFT.021.0	Δ
0.22	0.66	1.1	3	40	2.PFT.022.0	Δ
0.23	0.69	1.2	3	40	2.PFT.023.0	Δ
0.24	0.72	1.2	3	40	2.PFT.024.0	Δ
0.25	0.75	1.3	3	40	2.PFT.025.0	■
0.26	0.78	1.3	3	40	2.PFT.026.0	Δ
0.27	0.81	1.4	3	40	2.PFT.027.0	Δ
0.28	0.84	1.4	3	40	2.PFT.028.0	Δ
0.29	0.87	1.5	3	40	2.PFT.029.0	Δ
0.30	0.90	1.5	3	40	2.PFT.030.0	■
0.31	0.93	1.6	3	40	2.PFT.031.0	Δ
0.32	0.96	1.6	3	40	2.PFT.032.0	Δ
0.33	0.99	1.7	3	40	2.PFT.033.0	Δ
0.34	1.02	1.7	3	40	2.PFT.034.0	Δ
0.35	1.05	1.8	3	40	2.PFT.035.0	■
0.36	1.08	1.8	3	40	2.PFT.036.0	Δ
0.37	1.11	1.9	3	40	2.PFT.037.0	Δ
0.38	1.14	1.9	3	40	2.PFT.038.0	Δ
0.39	1.17	2.0	3	40	2.PFT.039.0	Δ
0.40	1.20	2.0	3	40	2.PFT.040.0	■
0.41	1.23	2.1	3	40	2.PFT.041.0	Δ

d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]		
0.42	1.26	2.1	3	40	2.PFT.042.0	Δ
0.43	1.29	2.2	3	40	2.PFT.043.0	Δ
0.44	1.32	2.2	3	40	2.PFT.044.0	Δ
0.45	1.35	2.3	3	40	2.PFT.045.0	■
0.46	1.38	2.3	3	40	2.PFT.046.0	Δ
0.47	1.41	2.4	3	40	2.PFT.047.0	Δ
0.48	1.44	2.4	3	40	2.PFT.048.0	Δ
0.49	1.47	2.5	3	40	2.PFT.049.0	Δ
0.50	1.50	2.5	3	40	2.PFT.050.0	■
0.51	1.53	2.6	3	40	2.PFT.051.0	Δ
0.52	1.56	2.6	3	40	2.PFT.052.0	Δ
0.53	1.59	2.7	3	40	2.PFT.053.0	Δ
0.54	1.62	2.7	3	40	2.PFT.054.0	Δ
0.55	1.65	2.8	3	40	2.PFT.055.0	■
0.56	1.68	2.8	3	40	2.PFT.056.0	Δ
0.57	1.71	2.9	3	40	2.PFT.057.0	Δ
0.58	1.74	2.9	3	40	2.PFT.058.0	Δ
0.59	1.77	3.0	3	40	2.PFT.059.0	Δ
0.60	1.80	3.0	3	40	2.PFT.060.0	■
0.61	1.83	3.1	3	40	2.PFT.061.0	Δ
0.62	1.86	3.1	3	40	2.PFT.062.0	Δ
0.63	1.89	3.2	3	40	2.PFT.063.0	Δ
0.64	1.92	3.2	3	40	2.PFT.064.0	Δ
0.65	1.95	3.3	3	40	2.PFT.065.0	■
0.66	1.98	3.3	3	40	2.PFT.066.0	Δ
0.67	2.01	3.4	3	40	2.PFT.067.0	Δ
0.68	2.04	3.4	3	40	2.PFT.068.0	Δ
0.69	2.07	3.5	3	40	2.PFT.069.0	Δ
0.70	2.10	3.5	3	40	2.PFT.070.0	■
0.71	2.13	3.6	3	40	2.PFT.071.0	Δ
0.72	2.16	3.6	3	40	2.PFT.072.0	Δ
0.73	2.19	3.7	3	40	2.PFT.073.0	Δ

d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]		
0.74	2.22	3.7	3	40	2.PFT.074.0	Δ
0.75	2.25	3.8	3	40	2.PFT.075.0	■
0.76	2.28	3.8	3	40	2.PFT.076.0	Δ
0.77	2.31	3.9	3	40	2.PFT.077.0	Δ
0.78	2.34	3.9	3	40	2.PFT.078.0	Δ
0.79	2.37	4.0	3	40	2.PFT.079.0	Δ
0.80	2.40	4.0	3	40	2.PFT.080.0	■
0.81	2.43	4.1	3	40	2.PFT.081.0	Δ
0.82	2.46	4.1	3	40	2.PFT.082.0	Δ
0.83	2.49	4.2	3	40	2.PFT.083.0	Δ
0.84	2.52	4.2	3	40	2.PFT.084.0	Δ
0.85	2.55	4.3	3	40	2.PFT.085.0	■
0.86	2.58	4.3	3	40	2.PFT.086.0	Δ
0.87	2.61	4.4	3	40	2.PFT.087.0	Δ
0.88	2.64	4.4	3	40	2.PFT.088.0	Δ
0.89	2.67	4.5	3	40	2.PFT.089.0	Δ
0.90	2.70	4.5	3	40	2.PFT.090.0	■
0.91	2.73	4.6	3	40	2.PFT.091.0	Δ
0.92	2.76	4.6	3	40	2.PFT.092.0	Δ
0.93	2.79	4.7	3	40	2.PFT.093.0	Δ
0.94	2.82	4.7	3	40	2.PFT.094.0	Δ
0.95	2.85	4.8	3	40	2.PFT.095.0	■
0.96	2.88	4.8	3	40	2.PFT.096.0	Δ
0.97	2.91	4.9	3	40	2.PFT.097.0	Δ
0.98	2.94	4.9	3	40	2.PFT.098.0	Δ
0.99	2.97	5.0	3	40	2.PFT.099.0	Δ
1.00	3.00	5.0	3	40	2.PFT.100.0	■
1.01	3.03	5.1	3	40	2.PFT.101.0	Δ
1.02	3.06	5.1	3	40	2.PFT.102.0	Δ
1.03	3.09	5.2	3	40	2.PFT.103.0	Δ
1.04	3.12	5.2	3	40	2.PFT.104.0	Δ
1.05	3.15	5.3	3	40	2.PFT.105.0	■

d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]		
1.06	3.18	5.3	3	40	2.PFT.106.0	Δ
1.07	3.21	5.4	3	40	2.PFT.107.0	Δ
1.08	3.24	5.4	3	40	2.PFT.108.0	Δ
1.09	3.27	5.5	3	40	2.PFT.109.0	Δ
1.10	3.30	5.5	3	40	2.PFT.110.0	■
1.11	3.33	5.6	3	40	2.PFT.111.0	Δ
1.12	3.36	5.6	3	40	2.PFT.112.0	Δ
1.13	3.39	5.7	3	40	2.PFT.113.0	Δ
1.14	3.42	5.7	3	40	2.PFT.114.0	Δ
1.15	3.45	5.8	3	40	2.PFT.115.0	■
1.16	3.48	5.8	3	40	2.PFT.116.0	Δ
1.17	3.51	5.9	3	40	2.PFT.117.0	Δ
1.18	3.54	5.9	3	40	2.PFT.118.0	Δ
1.19	3.57	6.0	3	40	2.PFT.119.0	Δ
1.20	3.60	6.0	3	40	2.PFT.120.0	■


Complementary products
CrazyDrill Flex Titanium p.38

■ Stock item
Δ Delivery term upon request,
minumum purchase order quantity 5 pcs.

Titanium - 30 x d

Carbide			Z2	Uncoated	
			Ø d ₁	0.1 - 1.2 mm	
			Tolerance	- 0.003 mm - 0.006 mm	

DRILLING WITH EXTERNAL COOLING

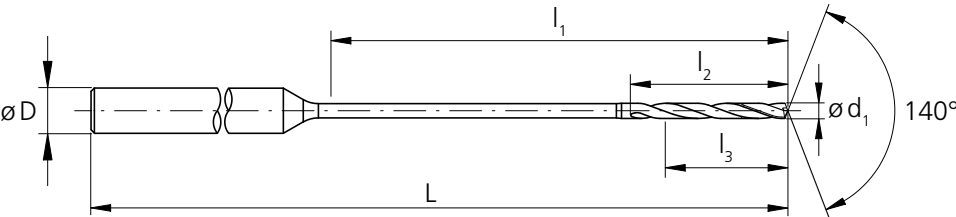

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.10	3.0	1.1	0.8	3	45	2.CFT.30010.0	■
0.11	3.3	1.2	0.9	3	45	2.CFT.30011.0	Δ
0.12	3.6	1.3	1.0	3	45	2.CFT.30012.0	Δ
0.13	3.9	1.4	1.0	3	45	2.CFT.30013.0	Δ
0.14	4.2	1.5	1.1	3	45	2.CFT.30014.0	Δ
0.15	4.5	1.6	1.2	3	45	2.CFT.30015.0	■
0.16	4.8	1.7	1.3	3	45	2.CFT.30016.0	Δ
0.17	5.1	1.8	1.4	3	45	2.CFT.30017.0	Δ
0.18	5.4	1.9	1.4	3	45	2.CFT.30018.0	Δ
0.19	5.7	2.0	1.5	3	45	2.CFT.30019.0	Δ
0.20	6.0	2.1	1.6	3	45	2.CFT.30020.0	■
0.21	6.3	2.2	1.7	3	45	2.CFT.30021.0	Δ
0.22	6.6	2.3	1.8	3	45	2.CFT.30022.0	Δ
0.23	6.9	2.4	1.8	3	45	2.CFT.30023.0	Δ
0.24	7.2	2.5	1.9	3	45	2.CFT.30024.0	Δ
0.25	7.5	2.6	2.0	3	45	2.CFT.30025.0	■
0.26	7.8	2.7	2.1	3	45	2.CFT.30026.0	Δ
0.27	8.1	2.8	2.2	3	45	2.CFT.30027.0	Δ
0.28	8.4	2.9	2.2	3	45	2.CFT.30028.0	Δ
0.29	8.7	3.0	2.3	3	45	2.CFT.30029.0	Δ
0.30	9.0	3.2	2.4	3	50	2.CFT.30030.0	■
0.31	9.3	3.3	2.5	3	50	2.CFT.30031.0	Δ
0.32	9.6	3.4	2.6	3	50	2.CFT.30032.0	Δ
0.33	9.9	3.5	2.6	3	50	2.CFT.30033.0	Δ
0.34	10.2	3.6	2.7	3	50	2.CFT.30034.0	Δ
0.35	10.5	3.7	2.8	3	50	2.CFT.30035.0	■
0.36	10.8	3.8	2.9	3	50	2.CFT.30036.0	Δ
0.37	11.1	3.9	3.0	3	50	2.CFT.30037.0	Δ
0.38	11.4	4.0	3.0	3	50	2.CFT.30038.0	Δ

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.39	11.7	4.1	3.1	3	50	2.CFT.30039.0	Δ
0.40	12.0	4.2	3.2	3	50	2.CFT.30040.0	■
0.41	12.3	4.3	3.3	3	50	2.CFT.30041.0	Δ
0.42	12.6	4.4	3.4	3	50	2.CFT.30042.0	Δ
0.43	12.9	4.5	3.4	3	50	2.CFT.30043.0	Δ
0.44	13.2	4.6	3.5	3	50	2.CFT.30044.0	Δ
0.45	13.5	4.7	3.6	3	50	2.CFT.30045.0	■
0.46	13.8	4.8	3.7	3	50	2.CFT.30046.0	Δ
0.47	14.1	4.9	3.8	3	50	2.CFT.30047.0	Δ
0.48	14.4	5.0	3.8	3	50	2.CFT.30048.0	Δ
0.49	14.7	5.1	3.9	3	50	2.CFT.30049.0	Δ
0.50	15.0	5.3	4.0	3	53	2.CFT.30050.0	■
0.51	15.3	5.4	4.1	3	53	2.CFT.30051.0	Δ
0.52	15.6	5.5	4.2	3	53	2.CFT.30052.0	Δ
0.53	15.9	5.6	4.2	3	53	2.CFT.30053.0	Δ
0.54	16.2	5.7	4.3	3	53	2.CFT.30054.0	Δ
0.55	16.5	5.8	4.4	3	53	2.CFT.30055.0	■
0.56	16.8	5.9	4.5	3	53	2.CFT.30056.0	Δ
0.57	17.1	6.0	4.6	3	53	2.CFT.30057.0	Δ
0.58	17.4	6.1	4.6	3	53	2.CFT.30058.0	Δ
0.59	17.7	6.2	4.7	3	53	2.CFT.30059.0	Δ
0.60	18.0	6.3	4.8	3	53	2.CFT.30060.0	■
0.61	18.3	6.4	4.9	3	53	2.CFT.30061.0	Δ
0.62	18.6	6.5	5.0	3	53	2.CFT.30062.0	Δ
0.63	18.9	6.6	5.0	3	53	2.CFT.30063.0	Δ
0.64	19.2	6.7	5.1	3	53	2.CFT.30064.0	Δ
0.65	19.5	6.8	5.2	3	53	2.CFT.30065.0	■
0.66	19.8	6.9	5.3	3	53	2.CFT.30066.0	Δ
0.67	20.1	7.0	5.4	3	53	2.CFT.30067.0	Δ


d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.68	20.4	7.1	5.4	3	53	2.CFT.30068.0	Δ
0.69	20.7	7.2	5.5	3	53	2.CFT.30069.0	Δ
0.70	21.0	7.4	5.6	3	60	2.CFT.30070.0	■
0.71	21.3	7.5	5.7	3	60	2.CFT.30071.0	Δ
0.72	21.6	7.6	5.8	3	60	2.CFT.30072.0	Δ
0.73	21.9	7.7	5.8	3	60	2.CFT.30073.0	Δ
0.74	22.2	7.8	5.9	3	60	2.CFT.30074.0	Δ
0.75	22.5	7.9	6.0	3	60	2.CFT.30075.0	■
0.76	22.8	8.0	6.1	3	60	2.CFT.30076.0	Δ
0.77	23.1	8.1	6.2	3	60	2.CFT.30077.0	Δ
0.78	23.4	8.2	6.2	3	60	2.CFT.30078.0	Δ
0.79	23.7	8.3	6.3	3	60	2.CFT.30079.0	Δ
0.80	24.0	8.4	6.4	3	60	2.CFT.30080.0	■
0.81	24.3	8.5	6.5	3	60	2.CFT.30081.0	Δ
0.82	24.6	8.6	6.6	3	60	2.CFT.30082.0	Δ
0.83	24.9	8.7	6.6	3	60	2.CFT.30083.0	Δ
0.84	25.2	8.8	6.7	3	60	2.CFT.30084.0	Δ
0.85	25.5	8.9	6.8	3	64	2.CFT.30085.0	■
0.86	25.8	9.0	6.9	3	64	2.CFT.30086.0	Δ
0.87	26.1	9.1	7.0	3	64	2.CFT.30087.0	Δ
0.88	26.4	9.2	7.0	3	64	2.CFT.30088.0	Δ
0.89	26.7	9.3	7.1	3	64	2.CFT.30089.0	Δ
0.90	27.0	9.5	7.2	3	64	2.CFT.30090.0	■
0.91	27.3	9.6	7.3	3	64	2.CFT.30091.0	Δ
0.92	27.6	9.7	7.4	3	64	2.CFT.30092.0	Δ
0.93	27.9	9.8	7.4	3	64	2.CFT.30093.0	Δ
0.94	28.2	9.9	7.5	3	64	2.CFT.30094.0	Δ
0.95	28.5	10.0	7.6	3	64	2.CFT.30095.0	■
0.96	28.8	10.1	7.7	3	64	2.CFT.30096.0	Δ

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.97	29.1	10.2	7.8	3	64	2.CFT.30097.0	Δ
0.98	29.4	10.3	7.8	3	64	2.CFT.30098.0	Δ
0.99	29.7	10.4	7.9	3	64	2.CFT.30099.0	Δ
1.00	30.0	10.5	8.0	3	70	2.CFT.30100.0	■
1.01	30.3	10.6	8.1	3	70	2.CFT.30101.0	Δ
1.02	30.6	10.7	8.2	3	70	2.CFT.30102.0	Δ
1.03	30.9	10.8	8.2	3	70	2.CFT.30103.0	Δ
1.04	31.2	10.9	8.3	3	70	2.CFT.30104.0	Δ
1.05	31.5	11.0	8.4	3	70	2.CFT.30105.0	■
1.06	31.8	11.1	8.5	3	70	2.CFT.30106.0	Δ
1.07	32.1	11.2	8.6	3	70	2.CFT.30107.0	Δ
1.08	32.4	11.3	8.6	3	70	2.CFT.30108.0	Δ
1.09	32.7	11.4	8.7	3	70	2.CFT.30109.0	Δ
1.10	33.0	11.6	8.8	3	70	2.CFT.30110.0	■
1.11	33.3	11.7	8.9	3	70	2.CFT.30111.0	Δ
1.12	33.6	11.8	9.0	3	70	2.CFT.30112.0	Δ
1.13	33.9	11.9	9.0	3	70	2.CFT.30113.0	Δ
1.14	34.2	12.0	9.1	3	70	2.CFT.30114.0	Δ
1.15	34.5	12.1	9.2	3	70	2.CFT.30115.0	■
1.16	34.8	12.2	9.3	3	70	2.CFT.30116.0	Δ
1.17	35.1	12.3	9.4	3	70	2.CFT.30117.0	Δ
1.18	35.4	12.4	9.4	3	70	2.CFT.30118.0	Δ
1.19	35.7	12.5	9.5	3	70	2.CFT.30119.0	Δ
1.20	36.0	12.6	9.6	3	70	2.CFT.30120.0	■


Complementary products
CrazyDrill Flexpilot Titanium p.36

■ Stock item
Δ Delivery term upon request, minumum purchase order quantity 5 pcs.

Titanium - 50 x d

Carbide			Z2	Uncoated	
			Ø d ₁	0.3 - 1.2 mm	
			Tolerance	- 0.003 mm - 0.006 mm	

DRILLING WITH INTEGRATED COOLING

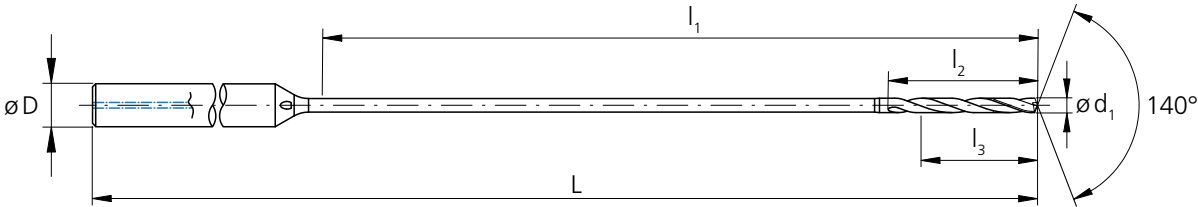

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.30	15.0	3.2	2.4	3	53	2.CFT.50030.IK.0	■
0.31	15.5	3.3	2.5	3	53	2.CFT.50031.IK.0	Δ
0.32	16.0	3.4	2.6	3	53	2.CFT.50032.IK.0	Δ
0.33	16.5	3.5	2.6	3	53	2.CFT.50033.IK.0	Δ
0.34	17.0	3.6	2.7	3	53	2.CFT.50034.IK.0	Δ
0.35	17.5	3.7	2.8	3	60	2.CFT.50035.IK.0	■
0.36	18.0	3.8	2.9	3	60	2.CFT.50036.IK.0	Δ
0.37	18.5	3.9	3.0	3	60	2.CFT.50037.IK.0	Δ
0.38	19.0	4.0	3.0	3	60	2.CFT.50038.IK.0	Δ
0.39	19.5	4.1	3.1	3	60	2.CFT.50039.IK.0	Δ
0.40	20.0	4.2	3.2	3	60	2.CFT.50040.IK.0	■
0.41	20.5	4.3	3.3	3	60	2.CFT.50041.IK.0	Δ
0.42	21.0	4.4	3.4	3	60	2.CFT.50042.IK.0	Δ
0.43	21.5	4.5	3.4	3	60	2.CFT.50043.IK.0	Δ
0.44	22.0	4.6	3.5	3	60	2.CFT.50044.IK.0	Δ
0.45	22.5	4.7	3.6	3	60	2.CFT.50045.IK.0	■
0.46	23.0	4.8	3.7	3	60	2.CFT.50046.IK.0	Δ
0.47	23.5	4.9	3.8	3	60	2.CFT.50047.IK.0	Δ
0.48	24.0	5.0	3.8	3	60	2.CFT.50048.IK.0	Δ
0.49	24.5	5.1	3.9	3	64	2.CFT.50049.IK.0	Δ
0.50	25.0	5.3	4.0	3	64	2.CFT.50050.IK.0	■
0.51	25.5	5.4	4.1	3	64	2.CFT.50051.IK.0	Δ
0.52	26.0	5.5	4.2	3	64	2.CFT.50052.IK.0	Δ
0.53	26.5	5.6	4.2	3	64	2.CFT.50053.IK.0	Δ

■ Stock item
Δ Delivery term upon request,
minumum purchase order quantity 5 pcs.

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.54	27.0	5.7	4.3	3	64	2.CFT.50054.IK.0	Δ
0.55	27.5	5.8	4.4	3	64	2.CFT.50055.IK.0	■
0.56	28.0	5.9	4.5	3	64	2.CFT.50056.IK.0	Δ
0.57	28.5	6.0	4.6	3	64	2.CFT.50057.IK.0	Δ
0.58	29.0	6.1	4.6	3	64	2.CFT.50058.IK.0	Δ
0.59	29.5	6.2	4.7	3	70	2.CFT.50059.IK.0	Δ
0.60	30.0	6.3	4.8	3	70	2.CFT.50060.IK.0	■
0.61	30.5	6.4	4.9	3	70	2.CFT.50061.IK.0	Δ
0.62	31.0	6.5	5.0	3	70	2.CFT.50062.IK.0	Δ
0.63	31.5	6.6	5.0	3	70	2.CFT.50063.IK.0	Δ
0.64	32.0	6.7	5.1	3	70	2.CFT.50064.IK.0	Δ
0.65	32.5	6.8	5.2	3	70	2.CFT.50065.IK.0	■
0.66	33.0	6.9	5.3	3	70	2.CFT.50066.IK.0	Δ
0.67	33.5	7.0	5.4	3	70	2.CFT.50067.IK.0	Δ
0.68	34.0	7.1	5.4	3	70	2.CFT.50068.IK.0	Δ
0.69	34.5	7.2	5.5	3	75	2.CFT.50069.IK.0	Δ
0.70	35.0	7.4	5.6	3	75	2.CFT.50070.IK.0	■
0.71	35.5	7.5	5.7	3	75	2.CFT.50071.IK.0	Δ
0.72	36.0	7.6	5.8	3	75	2.CFT.50072.IK.0	Δ
0.73	36.5	7.7	5.8	3	75	2.CFT.50073.IK.0	Δ
0.74	37.0	7.8	5.9	3	75	2.CFT.50074.IK.0	Δ
0.75	37.5	7.9	6.0	3	75	2.CFT.50075.IK.0	■
0.76	38.0	8.0	6.1	3	75	2.CFT.50076.IK.0	Δ
0.77	38.5	8.1	6.2	3	75	2.CFT.50077.IK.0	Δ

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.78	39.0	8.2	6.2	3	75	2.CFT.50078.IK.0	Δ
0.79	39.5	8.3	6.3	3	80	2.CFT.50079.IK.0	Δ
0.80	40.0	8.4	6.4	3	80	2.CFT.50080.IK.0	■
0.81	40.5	8.5	6.5	3	80	2.CFT.50081.IK.0	Δ
0.82	41.0	8.6	6.6	3	80	2.CFT.50082.IK.0	Δ
0.83	41.5	8.7	6.6	3	80	2.CFT.50083.IK.0	Δ
0.84	42.0	8.8	6.7	3	80	2.CFT.50084.IK.0	Δ
0.85	42.5	8.9	6.8	3	80	2.CFT.50085.IK.0	■
0.86	43.0	9.0	6.9	3	80	2.CFT.50086.IK.0	Δ
0.87	43.5	9.1	7.0	3	80	2.CFT.50087.IK.0	Δ
0.88	44.0	9.2	7.0	3	80	2.CFT.50088.IK.0	Δ
0.89	44.5	9.3	7.1	3	85	2.CFT.50089.IK.0	Δ
0.90	45.0	9.5	7.2	3	85	2.CFT.50090.IK.0	■
0.91	45.5	9.6	7.3	3	85	2.CFT.50091.IK.0	Δ
0.92	46.0	9.7	7.4	3	85	2.CFT.50092.IK.0	Δ
0.93	46.5	9.8	7.4	3	85	2.CFT.50093.IK.0	Δ
0.94	47.0	9.9	7.5	3	85	2.CFT.50094.IK.0	Δ
0.95	47.5	10.0	7.6	3	85	2.CFT.50095.IK.0	■
0.96	48.0	10.1	7.7	3	85	2.CFT.50096.IK.0	Δ
0.97	48.5	10.2	7.8	3	85	2.CFT.50097.IK.0	Δ
0.98	49.0	10.3	7.8	3	85	2.CFT.50098.IK.0	Δ
0.99	49.5	10.4	7.9	3	90	2.CFT.50099.IK.0	Δ
1.00	50.0	10.5	8.0	3	90	2.CFT.50100.IK.0	■
1.01	50.5	10.6	8.1	3	90	2.CFT.50101.IK.0	Δ


d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
1.02	51.0	10.7	8.2	3	90	2.CFT.50102.IK.0	Δ
1.03	51.5	10.8	8.2	3	90	2.CFT.50103.IK.0	Δ
1.04	52.0	10.9	8.3	3	90	2.CFT.50104.IK.0	Δ
1.05	52.5	11.0	8.4	3	90	2.CFT.50105.IK.0	■
1.06	53.0	11.1	8.5	3	90	2.CFT.50106.IK.0	Δ
1.07	53.5	11.2	8.6	3	90	2.CFT.50107.IK.0	Δ
1.08	54.0	11.3	8.6	3	90	2.CFT.50108.IK.0	Δ
1.09	54.5	11.4	8.7	3	95	2.CFT.50109.IK.0	Δ
1.10	55.0	11.6	8.8	3	95	2.CFT.50110.IK.0	■
1.11	55.5	11.7	8.9	3	95	2.CFT.50111.IK.0	Δ
1.12	56.0	11.8	9.0	3	95	2.CFT.50112.IK.0	Δ
1.13	56.5	11.9	9.0	3	95	2.CFT.50113.IK.0	Δ
1.14	57.0	12.0	9.1	3	95	2.CFT.50114.IK.0	Δ
1.15	57.5	12.1	9.2	3	95	2.CFT.50115.IK.0	■
1.16	58.0	12.2	9.3	3	95	2.CFT.50116.IK.0	Δ
1.17	58.5	12.3	9.4	3	95	2.CFT.50117.IK.0	Δ
1.18	59.0	12.4	9.4	3	95	2.CFT.50118.IK.0	Δ
1.19	59.5	12.5	9.5	3	95	2.CFT.50119.IK.0	Δ
1.20	60.0	12.6	9.6	3	95	2.CFT.50120.IK.0	■

Complementary products
CrazyDrill Flexpilot Titanium p.36

NEW

Titanium ATK - 30 x d

Carbide





Z2

Uncoated



DRILLING WITH INTEGRATED COOLING


Ø d_i

Tolerance

0.1 - 1.2 mm

- 0.003 mm

- 0.006 mm

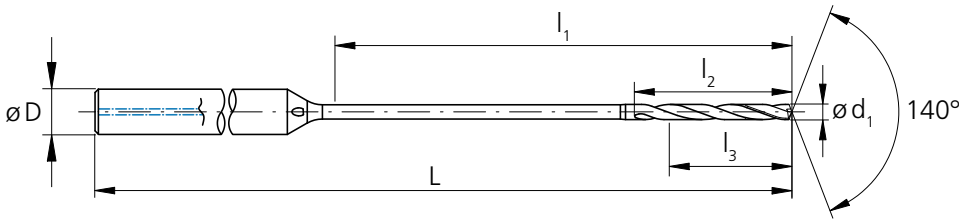

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.30	9.0	3.2	2.4	3	50	2.CFT.30030.ATK	■
0.31	9.3	3.3	2.5	3	50	2.CFT.30031.ATK	Δ
0.32	9.6	3.4	2.6	3	50	2.CFT.30032.ATK	Δ
0.33	9.9	3.5	2.6	3	50	2.CFT.30033.ATK	Δ
0.34	10.2	3.6	2.7	3	50	2.CFT.30034.ATK	Δ
0.35	10.5	3.7	2.8	3	50	2.CFT.30035.ATK	■
0.36	10.8	3.8	2.9	3	50	2.CFT.30036.ATK	Δ
0.37	11.1	3.9	3.0	3	50	2.CFT.30037.ATK	Δ
0.38	11.4	4.0	3.0	3	50	2.CFT.30038.ATK	Δ
0.39	11.7	4.1	3.1	3	50	2.CFT.30039.ATK	Δ
0.40	12.0	4.2	3.2	3	50	2.CFT.30040.ATK	■
0.41	12.3	4.3	3.3	3	50	2.CFT.30041.ATK	Δ
0.42	12.6	4.4	3.4	3	50	2.CFT.30042.ATK	Δ
0.43	12.9	4.5	3.4	3	50	2.CFT.30043.ATK	Δ
0.44	13.2	4.6	3.5	3	50	2.CFT.30044.ATK	Δ
0.45	13.5	4.7	3.6	3	50	2.CFT.30045.ATK	■
0.46	13.8	4.8	3.7	3	50	2.CFT.30046.ATK	Δ
0.47	14.1	4.9	3.8	3	50	2.CFT.30047.ATK	Δ
0.48	14.4	5.0	3.8	3	50	2.CFT.30048.ATK	Δ
0.49	14.7	5.2	3.9	3	50	2.CFT.30049.ATK	Δ
0.50	15.0	5.3	4.0	3	53	2.CFT.30050.ATK	■
0.51	15.3	5.4	4.1	3	53	2.CFT.30051.ATK	Δ
0.52	15.6	5.5	4.2	3	53	2.CFT.30052.ATK	Δ
0.53	15.9	5.6	4.2	3	53	2.CFT.30053.ATK	Δ
0.54	16.2	5.7	4.3	3	53	2.CFT.30054.ATK	Δ
0.55	16.5	5.8	4.4	3	53	2.CFT.30055.ATK	■
0.56	16.8	5.9	4.5	3	53	2.CFT.30056.ATK	Δ
0.57	17.1	6.0	4.6	3	53	2.CFT.30057.ATK	Δ

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.58	17.4	6.1	4.6	3	53	2.CFT.30058.ATK	Δ
0.59	17.7	6.2	4.7	3	53	2.CFT.30059.ATK	Δ
0.60	18.0	6.3	4.8	3	53	2.CFT.30060.ATK	■
0.61	18.3	6.4	4.9	3	53	2.CFT.30061.ATK	Δ
0.62	18.6	6.5	5.0	3	53	2.CFT.30062.ATK	Δ
0.63	18.9	6.6	5.0	3	53	2.CFT.30063.ATK	Δ
0.64	19.2	6.7	5.1	3	53	2.CFT.30064.ATK	Δ
0.65	19.5	6.8	5.2	3	53	2.CFT.30065.ATK	■
0.66	19.8	6.9	5.3	3	53	2.CFT.30066.ATK	Δ
0.67	20.1	7.0	5.4	3	53	2.CFT.30067.ATK	Δ
0.68	20.4	7.1	5.4	3	53	2.CFT.30068.ATK	Δ
0.69	20.7	7.3	5.5	3	53	2.CFT.30069.ATK	Δ
0.70	21.0	7.4	5.6	3	60	2.CFT.30070.ATK	■
0.71	21.3	7.5	5.7	3	60	2.CFT.30071.ATK	Δ
0.72	21.6	7.6	5.8	3	60	2.CFT.30072.ATK	Δ
0.73	21.9	7.7	5.8	3	60	2.CFT.30073.ATK	Δ
0.74	22.2	7.8	5.9	3	60	2.CFT.30074.ATK	Δ
0.75	22.5	7.9	6.0	3	60	2.CFT.30075.ATK	■
0.76	22.8	8.0	6.1	3	60	2.CFT.30076.ATK	Δ
0.77	23.1	8.1	6.2	3	60	2.CFT.30077.ATK	Δ
0.78	23.4	8.2	6.2	3	60	2.CFT.30078.ATK	Δ
0.79	23.7	8.3	6.3	3	60	2.CFT.30079.ATK	Δ
0.80	24.0	8.4	6.4	3	60	2.CFT.30080.ATK	■
0.81	24.3	8.5	6.5	3	60	2.CFT.30081.ATK	Δ
0.82	24.6	8.6	6.6	3	60	2.CFT.30082.ATK	Δ
0.83	24.9	8.7	6.6	3	60	2.CFT.30083.ATK	Δ
0.84	25.2	8.8	6.7	3	60	2.CFT.30084.ATK	Δ
0.85	25.5	8.9	6.8	3	64	2.CFT.30085.ATK	■

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.86	25.8	9.0	6.9	3	64	2.CFT.30086.ATK	Δ
0.87	26.1	9.1	7.0	3	64	2.CFT.30087.ATK	Δ
0.88	26.4	9.2	7.0	3	64	2.CFT.30088.ATK	Δ
0.89	26.7	9.4	7.1	3	64	2.CFT.30089.ATK	Δ
0.90	27.0	9.5	7.2	3	64	2.CFT.30090.ATK	■
0.91	27.3	9.6	7.3	3	64	2.CFT.30091.ATK	Δ
0.92	27.6	9.7	7.4	3	64	2.CFT.30092.ATK	Δ
0.93	27.9	9.8	7.4	3	64	2.CFT.30093.ATK	Δ
0.94	28.2	9.9	7.5	3	64	2.CFT.30094.ATK	Δ
0.95	28.5	10.0	7.6	3	64	2.CFT.30095.ATK	■
0.96	28.8	10.1	7.7	3	64	2.CFT.30096.ATK	Δ
0.97	29.1	10.2	7.8	3	64	2.CFT.30097.ATK	Δ
0.98	29.4	10.3	7.8	3	64	2.CFT.30098.ATK	Δ
0.99	29.7	10.4	7.9	3	64	2.CFT.30099.ATK	Δ
1.00	30.0	10.5	8.0	3	70	2.CFT.30100.ATK	■
1.01	30.3	10.6	8.1	3	70	2.CFT.30101.ATK	Δ
1.02	30.6	10.7	8.2	3	70	2.CFT.30102.ATK	Δ
1.03	30.9	10.8	8.2	3	70	2.CFT.30103.ATK	Δ
1.04	31.2	10.9	8.3	3	70	2.CFT.30104.ATK	Δ
1.05	31.5	11.0	8.4	3	70	2.CFT.30105.ATK	■
1.06	31.8	11.1	8.5	3	70	2.CFT.30106.ATK	Δ
1.07	32.1	11.2	8.6	3	70	2.CFT.30107.ATK	Δ
1.08	32.4	11.3	8.6	3	70	2.CFT.30108.ATK	Δ
1.09	32.7	11.5	8.7	3	70	2.CFT.30109.ATK	Δ
1.10	33.0	11.6	8.8	3	70	2.CFT.30110.ATK	■
1.11	33.3	11.7	8.9	3	70	2.CFT.30111.ATK	Δ
1.12	33.6	11.8	9.0	3	70	2.CFT.30112.ATK	Δ
1.13	33.9	11.9	9.0	3	70	2.CFT.30113.ATK	Δ
1.14	34.2	12.0	9.1	3	70	2.CFT.30114.ATK	Δ

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
1.15	34.5	12.1	9.2	3	70	2.CFT.30115.ATK	■
1.16	34.8	12.2	9.3	3	70	2.CFT.30116.ATK	Δ
1.17	35.1	12.3	9.4	3	70	2.CFT.30117.ATK	Δ
1.18	35.4	12.4	9.4	3	70	2.CFT.30118.ATK	Δ
1.19	35.7	12.5	9.5	3	70	2.CFT.30119.ATK	Δ
1.20	36.0	12.6	9.6	3	70	2.CFT.30120.ATK	■
1.25	37.5	13.1	10.0	4	80	2.CFT.30125.ATK	■
1.30	39.0	13.7	10.4	4	80	2.CFT.30130.ATK	■
1.35	40.5	14.2	10.8	4	80	2.CFT.30135.ATK	■
1.40	42.0	14.7	11.2	4	80	2.CFT.30140.ATK	■
1.45	43.5	15.2	11.6	4	80	2.CFT.30145.ATK	■
1.50	45.0	15.8	12.0	4	80	2.CFT.30150.ATK	■
1.55	46.5	16.3	12.4	4	90	2.CFT.30155.ATK	■
1.60	48.0	16.8	12.8	4	90	2.CFT.30160.ATK	■
1.65	49.5	17.3	13.2	4	90	2.CFT.30165.ATK	■
1.70	51.0	17.9	13.6	4	90	2.CFT.30170.ATK	■
1.75	52.5	18.4	14.0	4	100	2.CFT.30175.ATK	■
1.80	54.0	18.9	14.4	4	100	2.CFT.30180.ATK	■
1.85	55.5	19.4	14.8	4	100	2.CFT.30185.ATK	■
1.90	57.0	20.0	15.2	4	100	2.CFT.30190.ATK	■
1.95	58.5	20.5	15.6	4	100	2.CFT.30195.ATK	■
2.00	60.0	21.0	16.0	4	100	2.CFT.30200.ATK	■


Complementary products	
CrazyDrill Titanium TK	p.16
CrazyDrill Coolpilot Titanium ATC	p.66

■ Stock item
Δ Delivery term upon request, minumum purchase order quantity 5 pcs.

NEW

Titanium ATK - 50 x d

Carbide





Z2

Uncoated




DRILLING WITH INTEGRATED COOLING

Ø d_i

0.3 - 1.2 mm

Tolerance

- 0.003 mm
- 0.006 mm

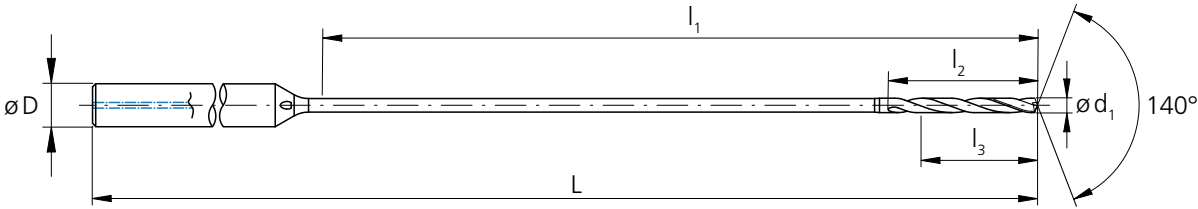

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.30	15.0	3.2	2.4	3	53	2.CFT.50030.ATK	■
0.31	15.5	3.3	2.5	3	53	2.CFT.50031.ATK	Δ
0.32	16.0	3.4	2.6	3	53	2.CFT.50032.ATK	Δ
0.33	16.5	3.5	2.6	3	53	2.CFT.50033.ATK	Δ
0.34	17.0	3.6	2.7	3	53	2.CFT.50034.ATK	Δ
0.35	17.5	3.7	2.8	3	53	2.CFT.50035.ATK	■
0.36	18.0	3.8	2.9	3	53	2.CFT.50036.ATK	Δ
0.37	18.5	3.9	3.0	3	53	2.CFT.50037.ATK	Δ
0.38	19.0	4.0	3.0	3	53	2.CFT.50038.ATK	Δ
0.39	19.5	4.1	3.1	3	53	2.CFT.50039.ATK	Δ
0.40	20.0	4.2	3.2	3	53	2.CFT.50040.ATK	■
0.41	20.5	4.3	3.3	3	60	2.CFT.50041.ATK	Δ
0.42	21.0	4.4	3.4	3	60	2.CFT.50042.ATK	Δ
0.43	21.5	4.5	3.4	3	60	2.CFT.50043.ATK	Δ
0.44	22.0	4.6	3.5	3	60	2.CFT.50044.ATK	Δ
0.45	22.5	4.7	3.6	3	60	2.CFT.50045.ATK	■
0.46	23.0	4.8	3.7	3	60	2.CFT.50046.ATK	Δ
0.47	23.5	4.9	3.8	3	60	2.CFT.50047.ATK	Δ
0.48	24.0	5.0	3.8	3	60	2.CFT.50048.ATK	Δ
0.49	24.5	5.2	3.9	3	60	2.CFT.50049.ATK	Δ
0.50	25.0	5.3	4.0	3	64	2.CFT.50050.ATK	■
0.51	25.5	5.4	4.1	3	64	2.CFT.50051.ATK	Δ
0.52	26.0	5.5	4.2	3	64	2.CFT.50052.ATK	Δ
0.53	26.5	5.6	4.2	3	64	2.CFT.50053.ATK	Δ
0.54	27.0	5.7	4.3	3	64	2.CFT.50054.ATK	Δ
0.55	27.5	5.8	4.4	3	64	2.CFT.50055.ATK	■
0.56	28.0	5.9	4.5	3	64	2.CFT.50056.ATK	Δ
0.57	28.5	6.0	4.6	3	64	2.CFT.50057.ATK	Δ

■ Stock item
Δ Delivery term upon request, minumum purchase order quantity 5 pcs.

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.58	29.0	6.1	4.6	3	64	2.CFT.50058.ATK	Δ
0.59	29.5	6.2	4.7	3	64	2.CFT.50059.ATK	Δ
0.60	30.0	6.3	4.8	3	64	2.CFT.50060.ATK	■
0.61	30.5	6.4	4.9	3	70	2.CFT.50061.ATK	Δ
0.62	31.0	6.5	5.0	3	70	2.CFT.50062.ATK	Δ
0.63	31.5	6.6	5.0	3	70	2.CFT.50063.ATK	Δ
0.64	32.0	6.7	5.1	3	70	2.CFT.50064.ATK	Δ
0.65	32.5	6.8	5.2	3	70	2.CFT.50065.ATK	■
0.66	33.0	6.9	5.3	3	70	2.CFT.50066.ATK	Δ
0.67	33.5	7.0	5.4	3	70	2.CFT.50067.ATK	Δ
0.68	34.0	7.1	5.4	3	70	2.CFT.50068.ATK	Δ
0.69	34.5	7.3	5.5	3	70	2.CFT.50069.ATK	Δ
0.70	35.0	7.4	5.6	3	75	2.CFT.50070.ATK	■
0.71	35.5	7.5	5.7	3	75	2.CFT.50071.ATK	Δ
0.72	36.0	7.6	5.8	3	75	2.CFT.50072.ATK	Δ
0.73	36.5	7.7	5.8	3	75	2.CFT.50073.ATK	Δ
0.74	37.0	7.8	5.9	3	75	2.CFT.50074.ATK	Δ
0.75	37.5	7.9	6.0	3	75	2.CFT.50075.ATK	■
0.76	38.0	8.0	6.1	3	75	2.CFT.50076.ATK	Δ
0.77	38.5	8.1	6.2	3	75	2.CFT.50077.ATK	Δ
0.78	39.0	8.2	6.2	3	75	2.CFT.50078.ATK	Δ
0.79	39.5	8.3	6.3	3	75	2.CFT.50079.ATK	Δ
0.80	40.0	8.4	6.4	3	80	2.CFT.50080.ATK	■
0.81	40.5	8.5	6.5	3	80	2.CFT.50081.ATK	Δ
0.82	41.0	8.6	6.6	3	80	2.CFT.50082.ATK	Δ
0.83	41.5	8.7	6.6	3	80	2.CFT.50083.ATK	Δ
0.84	42.0	8.8	6.7	3	80	2.CFT.50084.ATK	Δ
0.85	42.5	8.9	6.8	3	80	2.CFT.50085.ATK	■

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
0.86	43.0	9.0	6.9	3	80	2.CFT.50086.ATK	Δ
0.87	43.5	9.1	7.0	3	80	2.CFT.50087.ATK	Δ
0.88	44.0	9.2	7.0	3	80	2.CFT.50088.ATK	Δ
0.89	44.5	9.4	7.1	3	80	2.CFT.50089.ATK	Δ
0.90	45.0	9.5	7.2	3	80	2.CFT.50090.ATK	■
0.91	45.5	9.6	7.3	3	85	2.CFT.50091.ATK	Δ
0.92	46.0	9.7	7.4	3	85	2.CFT.50092.ATK	Δ
0.93	46.5	9.8	7.4	3	85	2.CFT.50093.ATK	Δ
0.94	47.0	9.9	7.5	3	85	2.CFT.50094.ATK	Δ
0.95	47.5	10.0	7.6	3	85	2.CFT.50095.ATK	■
0.96	48.0	10.1	7.7	3	85	2.CFT.50096.ATK	Δ
0.97	48.5	10.2	7.8	3	85	2.CFT.50097.ATK	Δ
0.98	49.0	10.3	7.8	3	85	2.CFT.50098.ATK	Δ
0.99	49.5	10.4	7.9	3	85	2.CFT.50099.ATK	Δ
1.00	50.0	10.5	8.0	3	90	2.CFT.50100.ATK	■
1.01	50.5	10.6	8.1	3	90	2.CFT.50101.ATK	Δ
1.02	51.0	10.7	8.2	3	90	2.CFT.50102.ATK	Δ
1.03	51.5	10.8	8.2	3	90	2.CFT.50103.ATK	Δ
1.04	52.0	10.9	8.3	3	90	2.CFT.50104.ATK	Δ
1.05	52.5	11.0	8.4	3	90	2.CFT.50105.ATK	■
1.06	53.0	11.1	8.5	3	90	2.CFT.50106.ATK	Δ
1.07	53.5	11.2	8.6	3	90	2.CFT.50107.ATK	Δ
1.08	54.0	11.3	8.6	3	90	2.CFT.50108.ATK	Δ
1.09	54.5	11.5	8.7	3	90	2.CFT.50109.ATK	Δ
1.10	55.0	11.6	8.8	3	95	2.CFT.50110.ATK	■
1.11	55.5	11.7	8.9	3	95	2.CFT.50111.ATK	Δ
1.12	56.0	11.8	9.0	3	95	2.CFT.50112.ATK	Δ
1.13	56.5	11.9	9.0	3	95	2.CFT.50113.ATK	Δ
1.14	57.0	12.0	9.1	3	95	2.CFT.50114.ATK	Δ

d ₁	l ₁	l ₂	l ₃	D (h6)	L	Item number	Availability
[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
1.15	57.5	12.1	9.2	3	95	2.CFT.50115.ATK	■
1.16	58.0	12.2	9.3	3	95	2.CFT.50116.ATK	Δ
1.17	58.5	12.3	9.4	3	95	2.CFT.50117.ATK	Δ
1.18	59.0	12.4	9.4	3	95	2.CFT.50118.ATK	Δ
1.19	59.5	12.5	9.5	3	95	2.CFT.50119.ATK	Δ
1.20	60.0	12.6	9.6	3	95	2.CFT.50120.ATK	■
1.25	62.5	13.1	10.0	4	115	2.CFT.50125.ATK	■
1.30	65.0	13.7	10.4	4	115	2.CFT.50130.ATK	■
1.35	67.5	14.2	10.8	4	115	2.CFT.50135.ATK	■
1.40	70.0	14.7	11.2	4	115	2.CFT.50140.ATK	■
1.45	72.5	15.2	11.6	4	115	2.CFT.50145.ATK	■
1.50	75.0	15.8	12.0	4	115	2.CFT.50150.ATK	■
1.55	77.5	16.3	12.4	4	130	2.CFT.50155.ATK	■
1.60	80.0	16.8	12.8	4	130	2.CFT.50160.ATK	■
1.65	82.5	17.3	13.2	4	130	2.CFT.50165.ATK	■
1.70	85.0	17.9	13.6	4	130	2.CFT.50170.ATK	■
1.75	87.5	18.4	14.0	4	140	2.CFT.50175.ATK	■
1.80	90.0	18.9	14.4	4	140	2.CFT.50180.ATK	■
1.85	92.5	19.4	14.8	4	140	2.CFT.50185.ATK	■
1.90	95.0	20.0	15.2	4	140	2.CFT.50190.ATK	■
1.95	97.5	20.5	15.6	4	140	2.CFT.50195.ATK	■
2.00	100.0	21.0	16.0	4	140	2.CFT.50200.ATK	■

Complementary products	
CrazyDrill Titanium TK	p.16
CrazyDrill Coolpilot Titanium ATC	p.66

Titanium - 3 x d

RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

P	☒	N	☒	S ₃	☒
M	☒	S ₁	☒	H ₁	☒
K	☒	S ₂	●	H ₂	☒

DRILLING WITH EXTERNAL COOLING | CUTTING DATA OVERVIEW



Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c [m/min]				Q ₁	f							
					Ød1					0.1 mm	0.2 mm	0.3 mm	0.4 mm	0.6 mm	0.8 mm	1.0 mm–1.2 mm	
					Ød1 ≤ 0.4		Ød1 > 0.4			f	f	f	f	f	f	f	
					Mid	High	Mid	High									
N	Copper	2.0040	Cu-OF / CW008A	UNS C10100	5	40	20	40	3xd1	0.005	0.010	0.015	0.020	0.030	0.040	0.060	
		2.0065	Cu-ETP / CW004A	UNS C11000													
S ₂	Titanium pure	3.7035	Gr.2	ASTM B348 / F67	5	20	20	30	3xd1	0.001	0.002	0.003	0.004	0.006	0.008	0.012	
		3.7065	Gr.4	ASTM B348 / F68													
	Titanium alloys	3.7165	TiAl6V4	ASTM B348 / F136	5	20	20	40	3xd1	0.002	0.003	0.005	0.006	0.009	0.012	0.018	

Note: The cutting parameters for titanium alloys are only just acceptable. We recommend using the *CrazyDrill Titanium TK* for optimal performance.

Titanium - 30 x d

RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

P	☒	N	☒	S ₃	☒
M	☒	S ₁	☒	H ₁	☒
K	☒	S ₂	●	H ₂	☒

DRILLING WITH EXTERNAL COOLING | CUTTING DATA OVERVIEW



Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c [m/min]				Q ₁	Q _s	f [mm/rev]							
											0.1 mm	0.2 mm	0.3 mm	Ød1	0.6 mm	0.8 mm	1.0 mm–1.2 mm	
					Ød1 ≤ 0.4		Ød1 > 0.4											
					Mid	High	Mid	High			f	f	f	f	f	f	f	
N	Copper	2.0040	Cu-OF / CW008A	UNS C10100	5	40	20	40		2xd1	0.5xd1	0.005	0.010	0.015	0.020	0.030	0.040	0.060
		2.0065	Cu-ETP / CW004A	UNS C11000														
S ₂	Titanium pure	3.7035	Gr.2	ASTM B348 / F67	5	20	20	30		2xd1	0.25xd1	0.001	0.002	0.003	0.004	0.006	0.008	0.012
		3.7065	Gr.4	ASTM B348 / F68														
		Titanium alloys	3.7165	TiAl6V4	ASTM B348 / F136	5	20	20	40		2xd1	0.25xd1	0.002	0.003	0.005	0.006	0.009	0.012

Note: The cutting parameters for titanium alloys are only just acceptable. We recommend using the *CrazyDrill Flex Titanium ATK* for optimal performance.

Titanium - 50 x d

RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

P	☒	N	☒	S ₃	☒
M	☒	S ₁	☒	H ₁	☒
K	☒	S ₂	●	H ₂	☒

DRILLING WITH INTERNAL COOLING | CUTTING DATA OVERVIEW



Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c [m/min]				Q ₁	Q _x	f [mm/rev]					
											0.3 mm	0.4 mm	Ød1		0.8 mm	1.0 mm–1.2 mm
					Ød1 ≤ 0.4		Ød1 > 0.4									
					Mid	High	Mid	High								
N	Copper	2.0040	Cu-OF / CW008A	UNS C10100	5	40	20	40	2xd1	0.5xd1	0.015	0.020	0.030	0.040	0.060	
		2.0065	Cu-ETP / CW004A	UNS C11000												
S ₂	Titanium pure	3.7035	Gr.2	ASTM B348 / F67	5	20	20	30	2xd1	0.25xd1	0.003	0.004	0.006	0.008	0.012	
		3.7065	Gr.4	ASTM B348 / F68												
	Titanium alloys	3.7165	TiAl6V4	ASTM B348 / F136	5	20	20	40	2xd1	0.25xd1	0.005	0.006	0.009	0.012	0.018	

Note: The cutting parameters for titanium alloys are only just acceptable. We recommend using the *CrazyDrill Flex Titanium ATK* for optimal performance.

NEW


Titanium ATK - 30 x d / 50 x d


RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

P	N	S ₃
M	S ₁	H ₁
K	S ₂	H ₂

DRILLING WITH INTERNAL COOLING | CUTTING DATA OVERVIEW

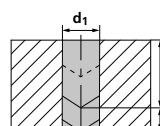

										f [mm/rev]													
Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c [m/min]				Q ₁		Q _s		0.3 mm	0.4 mm	0.6 mm	0.8 mm	1.0 mm	1.2 mm	1.4 mm	1.6 mm	1.8 mm	2.0 mm	
					Ød1 ≤ 0.4		Ød1 > 0.4		Ød1 < 0.5		Ød1 ≥ 0.5		f	f	f	f	f	f	f	f	f	f	f
					Mid	High	Mid	High															
	S ₂	Titanium alloy	3.7165	TiAl6V4	ASTM B348 / F136	5	20	20	40		2xd1	0.25 - 0.5 xd1	0.5 - 1.0 xd1	0.003	0.004	0.006	0.008	0.010	0.012	0.014	0.016	0.018	0.020
			9.9367	TiAl6Nb7	ASTM F1295																		

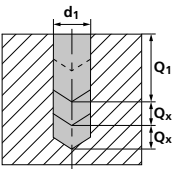

Drilling process CrazyDrill Flex

PRECISE AND EFFICIENT DRILLING FROM Ø 0.1 MM

Coolant type, pressure and filtration

Coolant type: For best results, Mikron Tool recommends the use of 8% emulsion with EP-Additives (Extreme-Pressure-Additives) as coolant fluid. Alternatively, cutting oil can be used with good results as well.

Filter: The large cooling channels allow standard filtration. Filter quality ≤ 0.050 mm.

For tools with external cooling no specific parameters have to be considered concerning filtration.

Coolant pressure: To ensure a reliable drilling process, the following minimal pressures are needed (see chart). Higher pressure is generally better for the cooling and flushing effect.

Revolution	[giri/min]	≤ 10'000	> 10'000
Minimal pressure	[bar]	15	30

For tools with external cooling no specific parameters have to be considered concerning coolant pressure. However, coolant must be directed to the drill tip cooling and lubricating the drill perfectly and flushing away the chips.

Drilling process CrazyDrill Flex

PRECISE AND EFFICIENT DRILLING FROM Ø 0.1 MM

CrazyDrill Flex Titanium and Titanium ATK 30 x d / 50 x d

Mikron Tool recommends pilot drilling for all types of CrazyDrill Flex:

CrazyDrill Flex Titanium

- CrazyDrill Flexpilot Titanium as pilot drill
- CrazyDrill Crosspilot as pilot drill on inclined surfaces

CrazyDrill Flex Titanium ATK

- CrazyDrill Titanium TK 3 x d as pilot drill
- CrazyDrill Coolpilot Titanium ATC as pilot drill for $d \geq 1\text{ mm}$
- CrazyDrill Crosspilot as pilot drill on inclined surfaces

Pilot drilling and drilling

Pilot drilling with CrazyDrill Flexpilot / CrazyDrill Titanium TK is the perfect starting point for accurate drilling (position and alignment accuracy) and a stable machining process. This is also valid for the pilot drill CrazyDrill Crosspilot on inclined surfaces.

The hole quality (position and alignment accuracy, no measurable transition from pilot hole to follow-up hole) and a stable machining process are guaranteed with the use of specific tools.

DRILLING PROCESS


Drilling as per DIN 66025 / PAL

G83 deep-drilling cycle with chip breaking and chip removal pecks

Q = depth of the respective peck


1 | PILOT DRILLING

- With CrazyDrill Flexpilot Titanium (straight surfaces) or CrazyDrill Crosspilot (inclined surfaces) when using CrazyDrill Flex Titanium.
- With CrazyDrill Titanium TK 3 x d or CrazyDrill Coolpilot Titanium ATC for $d \geq 1\text{ mm}$ (straight surfaces) when using CrazyDrill Flex Titanium ATK.
- With CrazyDrill Crosspilot (inclined surfaces) when using CrazyDrill Flex Titanium ATK.

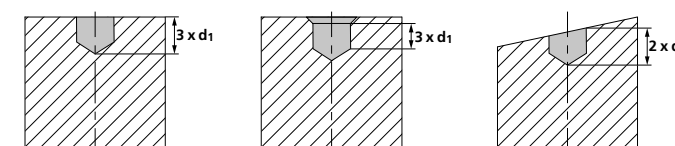


2 | DRILLING

- Drilling with CrazyDrill Flex Titanium / CrazyDrill Flex Titanium ATK up to maximum drilling depth Q_1 in one step (see cutting data table), with subsequent chip removal steps.

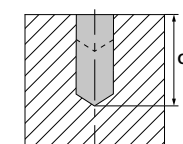

- Further drilling steps Q_x as per cutting data table, with subsequent chip removal steps.

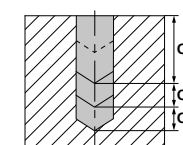


Note:

Between the drilling steps, the drill may exit completely from the bore. Do not take the drill completely out from the bore in case of resonant vibration. After the drill reached desired cutting depth, return at increased feed rate (or in case of perfect conditions rapid traverse) to safety position.

CrazyDrill Cool Titanium ATC / PTC



FOR EACH TITANIUM ITS DRILL!

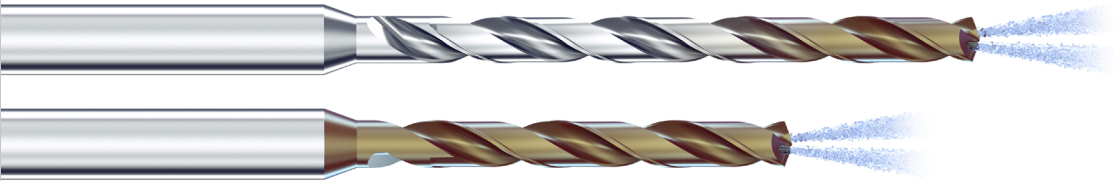

Mikron Tool introduces two new drills for titanium in the diameter range of 1.0 mm up to 6.35 mm:

- CrazyDrill Cool Titanium ATC for titanium alloys
- CrazyDrill Cool Titanium PTC for pure titanium



These drills, which perfectly match the respective titanium grades, achieve maximum drilling performance combined with high process reliability. It is now even possible to drill titanium alloys up to 10 x d in a single step without multiple pecking steps for chip removal.

Recommendations of Mikron Tool:

- Version ATC - 6 x d / PTC - 3 x d and 6 x d - centering is not necessary on straight surfaces. We recommend pilot drilling only on irregular, rough or inclined surfaces and if a high position accuracy is requested.
- Version ATC - 10 x d - we recommend pilot drilling with CrazyDrill Coolpilot Titanium or CrazyDrill Crosspilot on inclined surfaces.

Regrinding: This product can be reground starting from Ø 1.40 mm.

Please note: You couldn't find your suitable version of the CrazyDrill Cool Titanium (diameter, length, cutting direction...)? Ask us about our customized versions!

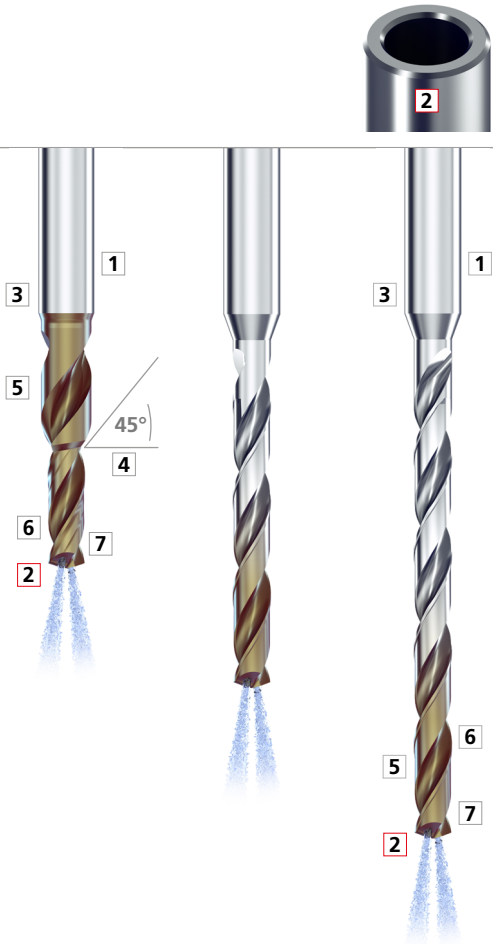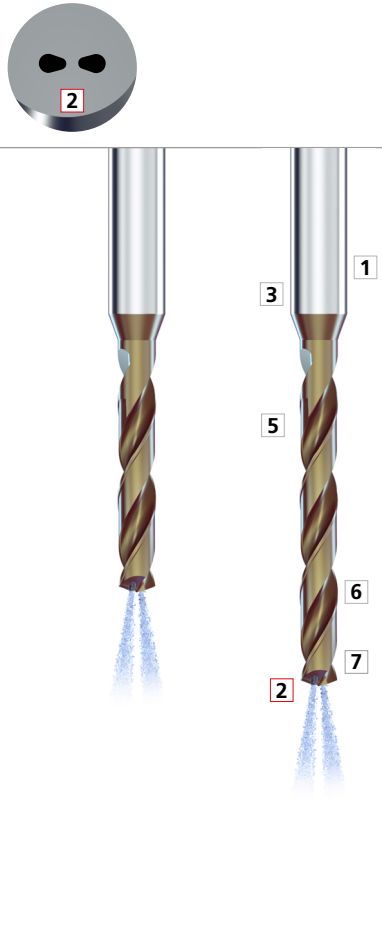Geometry ATC			Geometry PTC	
CRAZYDRILL™ by Mikron Tool Cool Titanium <i>ATC</i>			CRAZYDRILL™ by Mikron Tool Cool Titanium <i>PTC</i>	
3 x d	6 x d	10 x d	3 x d	6 x d
				
page 66	page 68	page 70	page 72	page 74

1 | SHANK
The reinforced solid carbide shank guarantees stability, high degree of concentricity and hence maximum drilling precision.

2 | NEW GENERATION OF COOLING CHANNELS
Due to a newly designed shape of helical cooling channels, up to four times more coolant volume reaches the drill tip. The result is continuous and efficient chip removal as well as constant and substantial cooling of cutting edges. A Powerchamber additionally guarantees sufficiently strong coolant flow for smaller diameters up to Ø 2.95 mm.


3 | CARBIDE
A specially developed micro-grain solid carbide grade allows machining at high speeds.

4 | 90° CHAMFER CUTTING EDGE
A 90° countersink can be placed simultaneously with the drilling.

5 | NEW COATING
The high-performance coating eXedur SNP is heat-resistant and wear-resistant, prevents build-up edges and promotes uniform chip flushing. A very long tool life is achieved.

6 | POLISHED FLUTES
The polished flutes in versions ATC and PTC promote uniform chip flushing.

7 | SINGLE GUIDING MARGIN AND THE NEWLY DESIGNED CHIP BARRIER MARGIN
The particularly smooth surfaces of the guiding margin and the newly designed chip barrier margin on the PTC drill prevent material sticking and reduce the load on the tool. The result is to ensure the highest degree of precision (straightness) and surface quality.

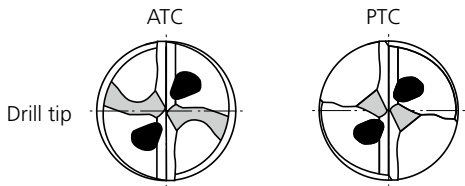

Your benefits

The most important features

- Two specific geometries: PTC for pure titanium and ATC for titanium alloys
- Innovative flute and tip geometry
- New: Chip barrier margin for PTC drills
- Specially designed cooling concept

Your advantages

- Perfect performance for any titanium grade
- Low cutting pressure
- Prevention of chip jamming
- Excellent heat dissipation

Your benefits

- Maximum drilling speed (e.g. 10 x d in one shot drilling with ATC)
- Excellent drilling quality
- Process reliability
- Up to 3 times longer tool life




Find out more!

Important features

THE NEW HIGH-PERFORMANCE DRILLS FOR TITANIUM

1. Challenge

Different properties of pure titanium and titanium alloys

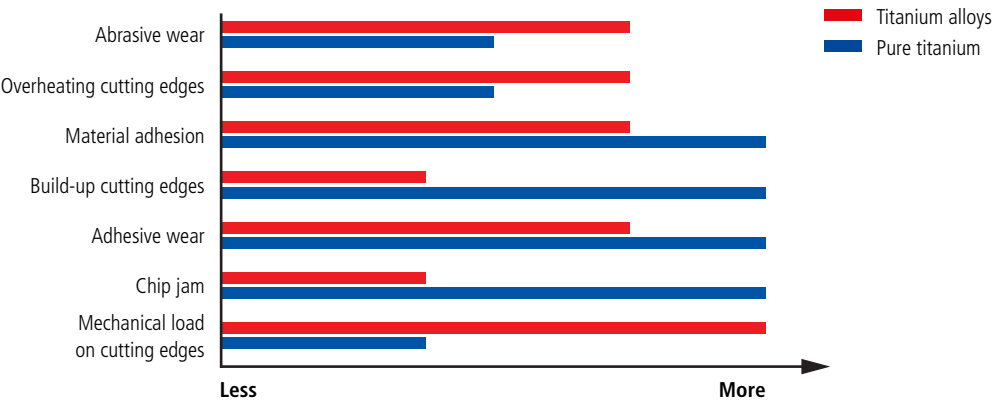

The material properties of pure and alloyed titanium differ significantly, which is of utmost importance for their industrial machining. Especially for drilling, the demands on tools in terms of machinability are very high.

Solution

Material-specific cutting edge geometries

Mikron Tool's solution for drilling different types of titanium consists of two material-specific cutting edge geometries. This is the only way to achieve controlled chip evacuation, high drilling speeds and repeatable processes with excellent hole quality.



Geometry ATC

Titanium alloys

Ti Gr.5 / Ti Gr.5 ELI / Ti Gr.Nb

S2

Geometry PTC

Pure Titan

Ti Gr.2 - Ti Gr.4

S2

2. Challenge


High thermal load and chip jamming

When drilling titanium, the high thermal load on the cutting edge is a challenge. This can lead to micro-chipping and eventually chipping on the cutting edge. Furthermore, titanium chips tend to compact in the drill tip area, preventing further chips from flowing out. The result is uncontrolled drill breakage.

Material	Thermal conductivity
Aluminum	167 W/mK
Stainless steel	21 W/mK
Titanium alloy	7 W/mK

Solution

Innovative cooling concept

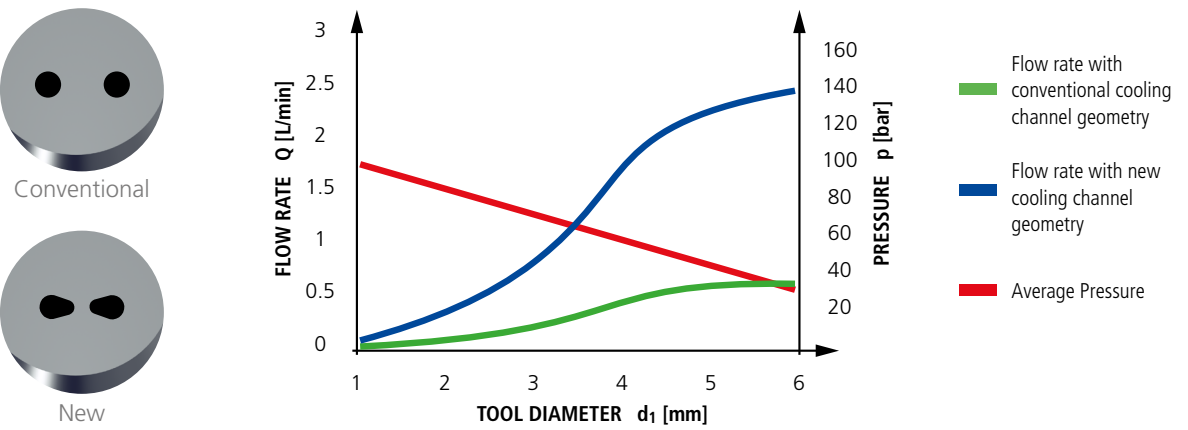


Two specially designed cooling channels with a very large cross-section guide massive amounts of cooling lubricant to the drill tip to avoid excessive thermal loads on the cutting edges. The patented special shape of the cooling channels allows up to 4 times more coolant (compared to conventional cooling channels) at the same pressure. At the same time, the massive coolant jet flushes the chips through the flutes and prevents any form of chip jamming.

Important features


THE NEW HIGH-PERFORMANCE DRILLS FOR TITANIUM

3. Challenge
Material adhesion

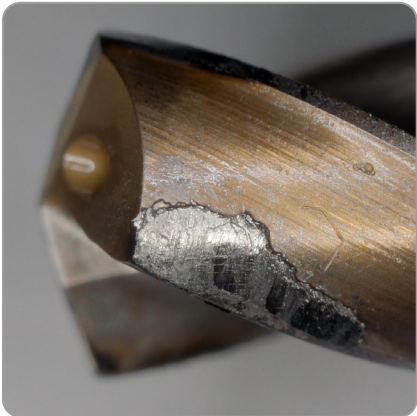


Material adhesions on guiding margin and the secondary margin have a negative effect on the hole quality.

Solution
Guiding margin and the newly designed chip barrier margin

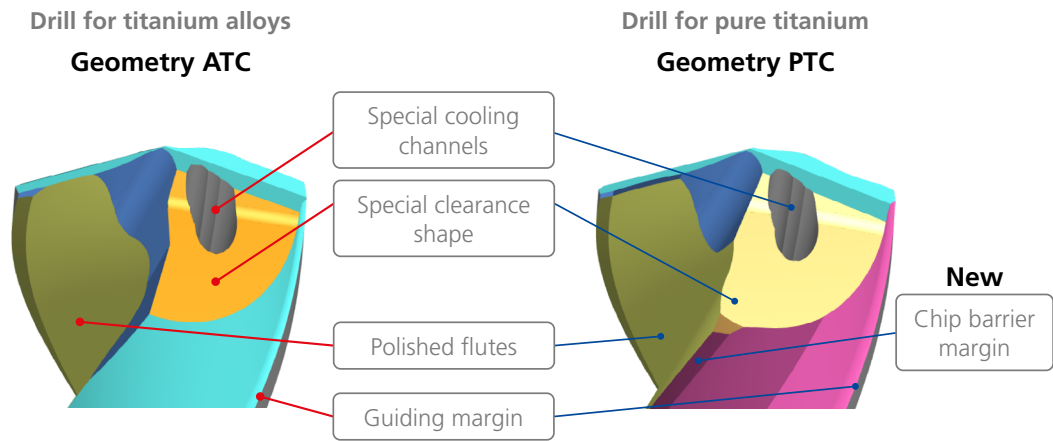

The particularly smooth surfaces of the guiding margin and the newly designed chip barrier margin on the PTC drill prevent material sticking and reduce the load on the tool.

4. Challenge
Tool jamming with increasing drilling depth

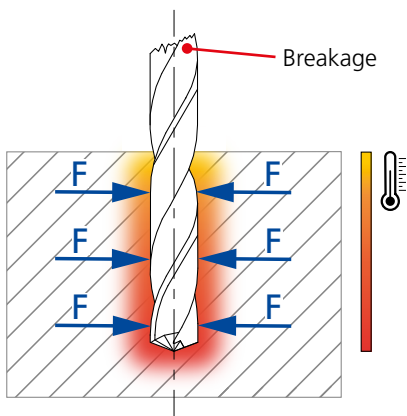

As the drilling depth increases, the extreme viscoplasticity of the titanium leads to drill jamming. This results in drill breakage

Solution
Special cutting edge geometry with optimum cutting performance and stability


Cutting edge geometry	Cutting performance	Cutting edge stability
Sharp	●	●
Rounded	●	●
CrazyDrill Cool Titanium	●	●

The solution is sharply ground cutting edges that must be stable at the same time - a contradiction in terms. A unique specific cutting edge geometry has been developed for titanium drills that masters this balance. As a result, cutting pressures and temperature are significantly reduced.

Important features

THE NEW HIGH-PERFORMANCE DRILLS FOR TITANIUM

5. Challenge
Position accuracy

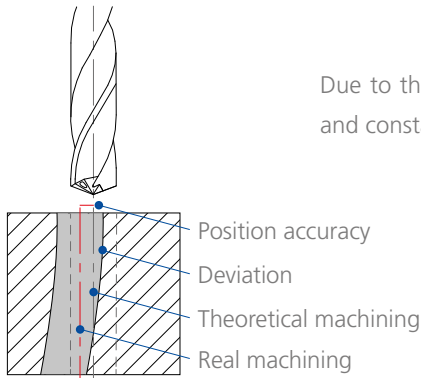


Due to the viscoplastic properties of titanium, an accurate entry point and constant tool guidance during drilling cannot be guaranteed.


Solution
Specific pilot drill

To achieve high position accuracy, the new pilot drill (with 90° chamfer) CrazyDrill Coolpilot Titanium ATC can be used.

Position accuracy
With pilot drill

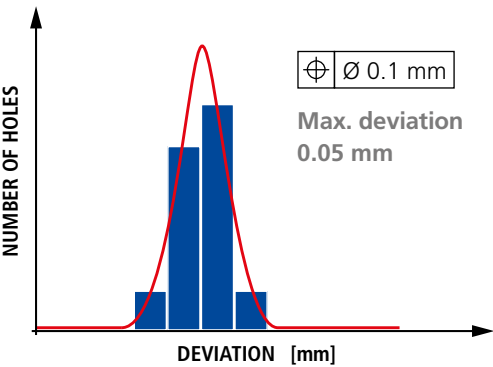

Without pilot drill

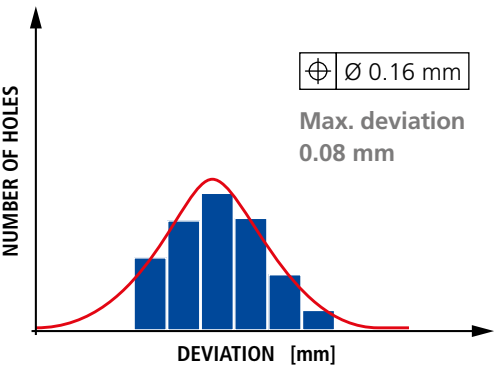

Material: Ti Gr.5 / 3.7165 / ASTM F136; Diameter: 4 mm; Drilling depth: 10 x d; Drill step: 1;
Coolant: Emulsion 8%; Cutting data: $v_c = 60\text{ m/min}$; $f = 0.08\text{ mm/rev}$

Maximum performance guaranteed


EXAMPLE IN TITANIUM MACHINING IN COMPARISON

Example
Longer tool life

Machining: Drilling in one shot
Drilling depth: 10 mm;
Coolant: Emulsion 8%

Titanium alloy: Ti Gr.5 / 3.7165 / TiAl6V4 / ASTM B348 **S2**


Tool: CrazyDrill Cool Titanium ATC
Diameter: 1.0 mm

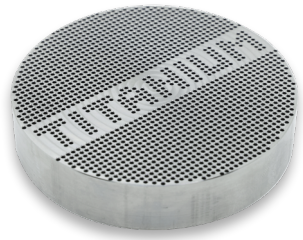

Cutting data:


Conventional titanium drill		CrazyDrill Cool Titanium ATC	
$v_c = 60\text{ m/min}$	$f = 0.020\text{ mm/rev}$	$v_c = 60\text{ m/min}$	$f = 0.020\text{ mm/rev}$

Results:

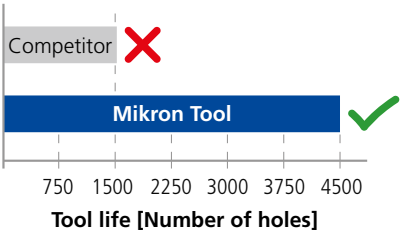

3 x

Competitor

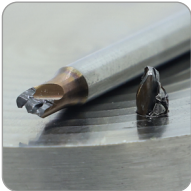

Breakage

Mikron Tool



Front view




Flute view



Guiding margin view

CrazyDrill Coolpilot Titanium ATC - 3 x d

DRILLING WITH THROUGH-TOOL COOLING

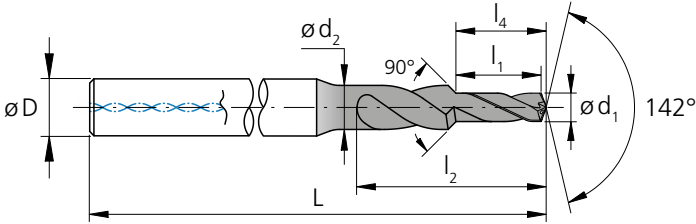

d ₁	d ₁	l ₁	d ₂	l ₂	l ₄	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
1.00		3.00	1.60	6.5	3.20	4	50	2.PD.01000.ATC	■
1.05		3.15	1.60	6.8	3.30	4	50	2.PD.01050.ATC	■
1.10		3.30	1.60	7.1	3.50	4	50	2.PD.01100.ATC	■
1.15		3.45	1.60	7.5	3.60	4	50	2.PD.01150.ATC	■
1.20		3.60	1.90	7.8	3.80	4	50	2.PD.01200.ATC	■
1.25		3.75	1.90	8.1	4.00	4	50	2.PD.01250.ATC	■
1.30		3.90	1.90	8.4	4.10	4	50	2.PD.01300.ATC	■
1.35		4.05	1.90	8.8	4.30	4	50	2.PD.01350.ATC	■
1.40		4.20	1.90	9.1	4.40	4	50	2.PD.01400.ATC	■
1.45		4.35	2.25	10.4	4.60	4	50	2.PD.01450.ATC	■
1.50		4.50	2.25	10.7	4.70	4	50	2.PD.01500.ATC	■
1.55		4.65	2.25	10.9	4.90	4	50	2.PD.01550.ATC	■
1.587	1/16	4.76	2.25	11.2	5.00	4	50	2.PD.F116.ATC	■
1.60		4.80	2.25	11.2	5.10	4	50	2.PD.01600.ATC	■
1.65		4.95	2.25	11.5	5.20	4	50	2.PD.01650.ATC	■
1.70		5.10	2.60	11.8	5.40	4	53	2.PD.01700.ATC	■
1.75		5.25	2.60	12.1	5.50	4	53	2.PD.01750.ATC	■
1.80		5.40	2.60	12.3	5.70	4	53	2.PD.01800.ATC	■
1.85		5.55	2.60	12.6	5.80	4	53	2.PD.01850.ATC	■
1.90		5.70	2.60	12.8	6.00	4	53	2.PD.01900.ATC	■
1.95		5.85	2.60	13.1	6.20	4	53	2.PD.01950.ATC	■
2.00		6.00	3.10	13.3	6.30	4	55	2.PD.02000.ATC	■
2.05		6.15	3.10	13.6	6.50	4	55	2.PD.02050.ATC	■
2.10		6.30	3.10	13.9	6.60	4	55	2.PD.02100.ATC	■
2.15		6.45	3.10	14.1	6.80	4	55	2.PD.02150.ATC	■
2.20		6.60	3.10	14.4	7.00	4	55	2.PD.02200.ATC	■
2.25		6.75	3.10	14.7	7.10	4	55	2.PD.02250.ATC	■
2.30		6.90	3.50	14.9	7.30	4	57	2.PD.02300.ATC	■
2.35		7.05	3.50	15.2	7.40	4	57	2.PD.02350.ATC	■
2.381	3/32	7.14	3.50	15.5	7.49	4	57	2.PD.F332.ATC	■
2.40		7.20	3.50	15.6	7.60	4	57	2.PD.02400.ATC	■
2.45		7.35	3.50	15.9	7.70	4	57	2.PD.02450.ATC	■
2.50		7.50	3.50	16.2	7.90	4	57	2.PD.02500.ATC	■
2.55		7.65	3.50	16.5	8.10	4	57	2.PD.02550.ATC	■
2.60		7.80	4.00	16.9	8.20	4	57	2.PD.02600.ATC	■
2.65		7.95	4.00	17.2	8.40	4	57	2.PD.02650.ATC	■
2.70		8.10	4.00	17.5	8.50	4	57	2.PD.02700.ATC	■
2.75		8.25	4.00	17.8	8.70	4	57	2.PD.02750.ATC	■
2.80		8.40	4.00	18.2	8.80	4	57	2.PD.02800.ATC	■
2.85		8.55	4.00	18.5	9.00	4	57	2.PD.02850.ATC	■
2.90		8.70	4.00	18.8	9.20	4	57	2.PD.02900.ATC	■

■ Stock item

Carbide				Z2	
	Ø d ₁	0.1 - 3.0 mm	3.05 - 6.0 mm	6.1 - 10.0 mm	
	Tolerance	+ 0.006 mm + 0.002 mm	+ 0.009 mm + 0.004 mm	+ 0.012 mm + 0.006 mm	


d ₁	d ₁	l ₁	d ₂	l ₂	l ₄	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]	[mm]	[mm]		
2.95		8.85	4.00	19.1	9.30	4	57	2.PD.02950.ATC	■
3.00		9.00	4.70	19.5	9.50	6	65	2.PD.03000.ATC	■
3.05		9.15	4.70	19.8	9.60	6	65	2.PD.03050.ATC	■
3.10		9.30	4.70	20.1	9.80	6	65	2.PD.03100.ATC	■
3.15		9.45	4.70	20.4	10.00	6	65	2.PD.03150.ATC	■
3.175	1/8	9.53	4.70	20.6	10.00	6	65	2.PD.F18.ATC	■
3.20		9.60	4.70	20.8	10.10	6	65	2.PD.03200.ATC	■
3.25		9.75	4.70	21.1	10.30	6	65	2.PD.03250.ATC	■
3.30		9.90	4.70	21.4	10.40	6	65	2.PD.03300.ATC	■
3.35		10.05	4.70	21.7	10.60	6	65	2.PD.03350.ATC	■
3.40		10.20	4.70	22.1	10.70	6	65	2.PD.03400.ATC	■
3.45		10.35	4.70	22.4	10.90	6	65	2.PD.03450.ATC	■
3.50		10.50	5.40	22.7	11.10	6	68	2.PD.03500.ATC	■
3.55		10.65	5.40	23.0	11.20	6	68	2.PD.03550.ATC	■
3.60		10.80	5.40	23.4	11.40	6	68	2.PD.03600.ATC	■
3.65		10.95	5.40	23.7	11.50	6	68	2.PD.03650.ATC	■
3.70		11.10	5.40	24.0	11.70	6	68	2.PD.03700.ATC	■
3.75		11.25	5.40	24.3	11.80	6	68	2.PD.03750.ATC	■
3.80		11.40	5.40	24.7	12.00	6	68	2.PD.03800.ATC	■
3.85		11.55	5.40	25.0	12.20	6	68	2.PD.03850.ATC	■
3.90		11.70	5.40	25.3	12.30	6	68	2.PD.03900.ATC	■
3.95		11.85	5.40	25.6	12.50	6	68	2.PD.03950.ATC	■
3.968	5/32	11.90	5.40	25.7	12.50	6	68	2.PD.F532.ATC	■
4.00		12.00	5.40	26.0	12.60	6	68	2.PD.04000.ATC	■
4.10		12.30	6.00	26.6	12.90	6	72	2.PD.04100.ATC	■
4.20		12.60	6.00	27.2	13.30	6	72	2.PD.04200.ATC	■
4.30		12.90	6.00	27.9	13.60	6	72	2.PD.04300.ATC	■
4.40		13.20	6.00	28.5	13.90	6	72	2.PD.04400.ATC	■
4.50		13.50	6.00	29.2	14.20	6	72	2.PD.04500.ATC	■
4.60		13.80	6.00	29.8	14.50	6	72	2.PD.04600.ATC	■
4.70		14.10	7.00	30.5	14.80	8	75	2.PD.04700.ATC	■
4.762	3/16	14.29	7.00	30.8	15.00	8	75	2.PD.F316.ATC	■
4.80		14.40	7.00	31.1	15.20	8	75	2.PD.04800.ATC	■
4.90		14.70	7.00	31.8	15.50	8	75	2.PD.04900.ATC	■
5.00		15.00	7.00	32.4	15.80	8	75	2.PD.05000.ATC	■
5.10		15.30	7.50	33.1	16.10	8	75	2.PD.05100.ATC	■
5.20		15.60	7.50	33.7	16.40	8	75	2.PD.05200.ATC	■
5.30		15.90	7.50	34.4	16.70	8	75	2.PD.05300.ATC	■
5.40		16.20	8.00	35.0	17.10	8	80	2.PD.05400.ATC	■
5.50		16.50	8.00	35.7	17.40	8	80	2.PD.05500.ATC	■
5.560	7/32	16.68	8.00	36.0	17.52	8	80	2.PD.F732.ATC	■
5.60		16.80	8.00	36.3	17.70	8	80	2.PD.05600.ATC	■
5.70		17.10	8.00	37.0	18.00	8	80	2.PD.05700.ATC	■
5.80		17.40	8.00	37.6	18.30	8	80	2.PD.05800.ATC	■
5.90		17.70	8.00	38.3	18.60	8	80	2.PD.05900.ATC	■
6.00		18.00	8.00	38.9	18.90	8	80	2.PD.06000.ATC	■
6.350	1/4	19.05	8.00	41.1	20.02	8	80	2.PD.F14.ATC	■

Complementary products
CrazyDrill Cool Titanium ATC p.70

CrazyDrill Cool Titanium ATC - 6 x d

DRILLING WITH INTERNAL COOLING

Carbide			Z2		
Ø d _i	0.1 - 3.0 mm	3.05 - 6.0 mm	6.1 - 10.0 mm		
Tolerance	+ 0.006 mm 0	+ 0.009 mm + 0.001 mm	+ 0.010 mm + 0.001 mm		

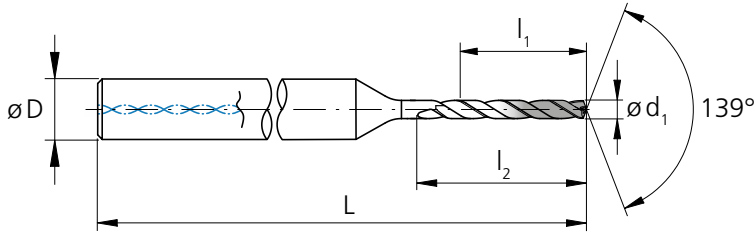

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
1.00		6.0	9.0	4	55	2.CD.060100.ATC	■
1.05		6.3	9.5	4	55	2.CD.060105.ATC	■
1.10		6.6	9.9	4	55	2.CD.060110.ATC	■
1.15		6.9	10.4	4	55	2.CD.060115.ATC	■
1.20		7.2	10.8	4	57	2.CD.060120.ATC	■
1.25		7.5	11.3	4	57	2.CD.060125.ATC	■
1.30		7.8	11.7	4	57	2.CD.060130.ATC	■
1.35		8.1	12.2	4	57	2.CD.060135.ATC	■
1.40		8.4	12.6	4	57	2.CD.060140.ATC	■
1.45		8.7	13.1	4	58	2.CD.060145.ATC	■
1.50		9.0	13.5	4	58	2.CD.060150.ATC	■
1.55		9.3	14.0	4	58	2.CD.060155.ATC	■
1.587	1/16	9.5	14.3	4	58	2.CD.060F116.ATC	■
1.60		9.6	14.4	4	58	2.CD.060160.ATC	■
1.65		9.9	14.9	4	58	2.CD.060165.ATC	■
1.70		10.2	15.3	4	60	2.CD.060170.ATC	■
1.75		10.5	15.8	4	60	2.CD.060175.ATC	■
1.80		10.8	16.2	4	60	2.CD.060180.ATC	■
1.85		11.1	16.7	4	60	2.CD.060185.ATC	■
1.90		11.4	17.1	4	60	2.CD.060190.ATC	■
1.95		11.7	17.6	4	60	2.CD.060195.ATC	■
2.00		12.0	18.0	4	63	2.CD.060200.ATC	■

■ Stock item

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
2.05		12.3	18.5	4	63	2.CD.060205.ATC	■
2.10		12.6	18.9	4	63	2.CD.060210.ATC	■
2.15		12.9	19.4	4	63	2.CD.060215.ATC	■
2.20		13.2	19.8	4	63	2.CD.060220.ATC	■
2.25		13.5	20.3	4	63	2.CD.060225.ATC	■
2.30		13.8	20.7	4	65	2.CD.060230.ATC	■
2.35		14.1	21.2	4	65	2.CD.060235.ATC	■
2.381	3/32	14.3	21.4	4	65	2.CD.060F332.ATC	■
2.40		14.4	21.6	4	65	2.CD.060240.ATC	■
2.45		14.7	22.1	4	65	2.CD.060245.ATC	■
2.50		15.0	22.5	4	65	2.CD.060250.ATC	■
2.55		15.3	23.0	4	65	2.CD.060255.ATC	■
2.60		15.6	23.4	4	68	2.CD.060260.ATC	■
2.65		15.9	23.9	4	68	2.CD.060265.ATC	■
2.70		16.2	24.3	4	68	2.CD.060270.ATC	■
2.75		16.5	24.8	4	68	2.CD.060275.ATC	■
2.80		16.8	25.2	4	68	2.CD.060280.ATC	■
2.85		17.1	25.7	4	68	2.CD.060285.ATC	■
2.90		17.4	26.1	4	68	2.CD.060290.ATC	■
2.95		17.7	26.6	4	68	2.CD.060295.ATC	■
3.00		18.0	27.0	6	74	2.CD.060300.ATC	■
3.05		18.3	27.5	6	74	2.CD.060305.ATC	■

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
3.10		18.6	27.9	6	74	2.CD.060310.ATC	■
3.15		18.9	28.4	6	74	2.CD.060315.ATC	■
3.175	1/8	19.1	28.6	6	74	2.CD.060F18.ATC	■
3.20		19.2	28.8	6	74	2.CD.060320.ATC	■
3.25		19.5	29.3	6	74	2.CD.060325.ATC	■
3.30		19.8	29.7	6	74	2.CD.060330.ATC	■
3.35		20.1	30.2	6	74	2.CD.060335.ATC	■
3.40		20.4	30.6	6	74	2.CD.060340.ATC	■
3.45		20.7	31.1	6	74	2.CD.060345.ATC	■
3.50		21.0	31.5	6	78	2.CD.060350.ATC	■
3.55		21.3	32.0	6	78	2.CD.060355.ATC	■
3.60		21.6	32.4	6	78	2.CD.060360.ATC	■
3.65		21.9	32.9	6	78	2.CD.060365.ATC	■
3.70		22.2	33.3	6	78	2.CD.060370.ATC	■
3.75		22.5	33.8	6	78	2.CD.060375.ATC	■
3.80		22.8	34.2	6	78	2.CD.060380.ATC	■
3.85		23.1	34.7	6	78	2.CD.060385.ATC	■
3.90		23.4	35.1	6	78	2.CD.060390.ATC	■
3.95		23.7	35.6	6	78	2.CD.060395.ATC	■
3.968	5/32	23.8	35.7	6	78	2.CD.060F532.ATC	■
4.00		24.0	36.0	6	78	2.CD.060400.ATC	■
4.10		24.6	36.9	6	80	2.CD.060410.ATC	■

■ Stock item


d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
4.20		25.2	37.8	6	80	2.CD.060420.ATC	■
4.30		25.8	38.7	6	80	2.CD.060430.ATC	■
4.40		26.4	39.6	6	80	2.CD.060440.ATC	■
4.50		27.0	40.5	6	80	2.CD.060450.ATC	■
4.60		27.6	41.4	6	80	2.CD.060460.ATC	■
4.70		28.2	42.3	6	84	2.CD.060470.ATC	■
4.762	3/16	28.6	42.9	6	84	2.CD.060F316.ATC	■
4.80		28.8	43.2	6	84	2.CD.060480.ATC	■
4.90		29.4	44.1	6	84	2.CD.060490.ATC	■
5.00		30.0	45.0	6	84	2.CD.060500.ATC	■
5.10		30.6	45.9	6	84	2.CD.060510.ATC	■
5.20		31.2	46.8	6	84	2.CD.060520.ATC	■
5.30		31.8	47.7	6	84	2.CD.060530.ATC	■
5.40		32.4	48.6	6	88	2.CD.060540.ATC	■
5.50		33.0	49.5	6	88	2.CD.060550.ATC	■
5.560	7/32	33.4	50.0	6	88	2.CD.060F732.ATC	■
5.60		33.6	50.4	6	88	2.CD.060560.ATC	■
5.70		34.2	51.3	6	88	2.CD.060570.ATC	■
5.80		34.8	52.2	6	88	2.CD.060580.ATC	■
5.90		35.4	53.1	6	88	2.CD.060590.ATC	■
6.00		36.0	54.0	6	88	2.CD.060600.ATC	■
6.350	1/4	38.1	57.2	8	98	2.CD.060F14.ATC	■

Complementary products
CrazyDrill Coolpilot Titanium p.66

CrazyDrill Cool Titanium ATC - 10 x d

DRILLING WITH INTERNAL COOLING

Carbide			Z2		
Ø d _i	0.1 - 3.0 mm	3.05 - 6.0 mm	6.1 - 10.0 mm		
Tolerance	+ 0.006 mm 0	+ 0.009 mm + 0.001 mm	+ 0.010 mm + 0.001 mm		

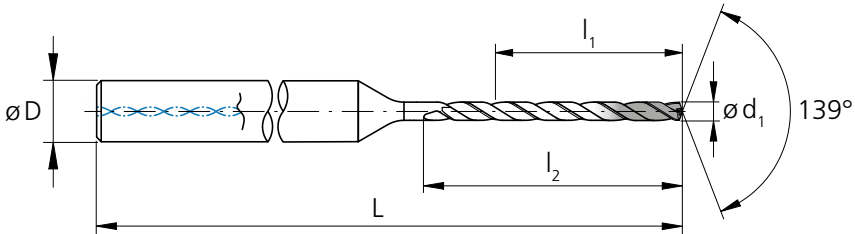

d ₁	d ₁	l ₁	l ₂	D	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	(h6) [mm]	[mm]		
1.00		10.0	13.0	4	59	2.CD.100100.ATC	■
1.05		10.5	13.7	4	59	2.CD.100105.ATC	■
1.10		11.0	14.3	4	59	2.CD.100110.ATC	■
1.15		11.5	15.0	4	59	2.CD.100115.ATC	■
1.20		12.0	15.6	4	62	2.CD.100120.ATC	■
1.25		12.5	16.3	4	62	2.CD.100125.ATC	■
1.30		13.0	16.9	4	62	2.CD.100130.ATC	■
1.35		13.5	17.6	4	62	2.CD.100135.ATC	■
1.40		14.0	18.2	4	62	2.CD.100140.ATC	■
1.45		14.5	18.9	4	65	2.CD.100145.ATC	■
1.50		15.0	19.5	4	65	2.CD.100150.ATC	■
1.55		15.5	20.2	4	65	2.CD.100155.ATC	■
1.587	1/16	15.9	20.6	4	65	2.CD.100F116.ATC	■
1.60		16.0	20.8	4	65	2.CD.100160.ATC	■
1.65		16.5	21.5	4	65	2.CD.100165.ATC	■
1.70		17.0	22.1	4	67	2.CD.100170.ATC	■
1.75		17.5	22.8	4	67	2.CD.100175.ATC	■
1.80		18.0	23.4	4	67	2.CD.100180.ATC	■
1.85		18.5	24.1	4	67	2.CD.100185.ATC	■
1.90		19.0	24.7	4	67	2.CD.100190.ATC	■
1.95		19.5	25.4	4	67	2.CD.100195.ATC	■
2.00		20.0	26.0	4	70	2.CD.100200.ATC	■

■ Stock item

d ₁	d ₁	l ₁	l ₂	D	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	(h6) [mm]	[mm]		
2.05		20.5	26.7	4	70	2.CD.100205.ATC	■
2.10		21.0	27.3	4	70	2.CD.100210.ATC	■
2.15		21.5	28.0	4	70	2.CD.100215.ATC	■
2.20		22.0	28.6	4	70	2.CD.100220.ATC	■
2.25		22.5	29.3	4	70	2.CD.100225.ATC	■
2.30		23.0	29.9	4	75	2.CD.100230.ATC	■
2.35		23.5	30.6	4	75	2.CD.100235.ATC	■
2.381	3/32	23.8	31.0	4	75	2.CD.100F332.ATC	■
2.40		24.0	31.2	4	75	2.CD.100240.ATC	■
2.45		24.5	31.9	4	75	2.CD.100245.ATC	■
2.50		25.0	32.5	4	75	2.CD.100250.ATC	■
2.55		25.5	33.2	4	75	2.CD.100255.ATC	■
2.60		26.0	33.8	4	80	2.CD.100260.ATC	■
2.65		26.5	34.5	4	80	2.CD.100265.ATC	■
2.70		27.0	35.1	4	80	2.CD.100270.ATC	■
2.75		27.5	35.8	4	80	2.CD.100275.ATC	■
2.80		28.0	36.4	4	80	2.CD.100280.ATC	■
2.85		28.5	37.1	4	80	2.CD.100285.ATC	■
2.90		29.0	37.7	4	80	2.CD.100290.ATC	■
2.95		29.5	38.4	4	80	2.CD.100295.ATC	■
3.00		30.0	39.0	6	87	2.CD.100300.ATC	■
3.05		30.5	39.7	6	87	2.CD.100305.ATC	■

d ₁	d ₁	l ₁	l ₂	D	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	(h6) [mm]	[mm]		
3.10		31.0	40.3	6	87	2.CD.100310.ATC	■
3.15		31.5	41.0	6	87	2.CD.100315.ATC	■
3.175	1/8	32.0	41.3	6	87	2.CD.100F18.ATC	■
3.20		32.0	41.6	6	87	2.CD.100320.ATC	■
3.25		32.5	42.3	6	87	2.CD.100325.ATC	■
3.30		33.0	42.9	6	87	2.CD.100330.ATC	■
3.35		33.5	43.6	6	87	2.CD.100335.ATC	■
3.40		34.0	44.2	6	87	2.CD.100340.ATC	■
3.45		34.5	44.9	6	87	2.CD.100345.ATC	■
3.50		35.0	45.5	6	95	2.CD.100350.ATC	■
3.55		35.5	46.2	6	95	2.CD.100355.ATC	■
3.60		36.0	46.8	6	95	2.CD.100360.ATC	■
3.65		36.5	47.5	6	95	2.CD.100365.ATC	■
3.70		37.0	48.1	6	95	2.CD.100370.ATC	■
3.75		37.5	48.8	6	95	2.CD.100375.ATC	■
3.80		38.0	49.4	6	95	2.CD.100380.ATC	■
3.85		38.5	50.1	6	95	2.CD.100385.ATC	■
3.90		39.0	50.7	6	95	2.CD.100390.ATC	■
3.95		39.5	51.4	6	95	2.CD.100395.ATC	■
3.968	5/32	40.0	51.6	6	95	2.CD.100F532.ATC	■
4.00		40.0	52.0	6	95	2.CD.100400.ATC	■
4.10		41.0	53.3	6	100	2.CD.100410.ATC	■

■ Stock item


d ₁	d ₁	l ₁	l ₂	D	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	(h6) [mm]	[mm]		
4.20		42.0	54.6	6	100	2.CD.100420.ATC	■
4.30		43.0	55.9	6	100	2.CD.100430.ATC	■
4.40		44.0	57.2	6	100	2.CD.100440.ATC	■
4.50		45.0	58.5	6	100	2.CD.100450.ATC	■
4.60		46.0	59.8	6	100	2.CD.100460.ATC	■
4.70		47.0	61.1	6	105	2.CD.100470.ATC	■
4.762	3/16	48.0	61.9	6	105	2.CD.100F316.ATC	■
4.80		48.0	62.4	6	105	2.CD.100480.ATC	■
4.90		49.0	63.7	6	105	2.CD.100490.ATC	■
5.00		50.0	65.0	6	105	2.CD.100500.ATC	■
5.10		51.0	66.3	6	105	2.CD.100510.ATC	■
5.20		52.0	67.6	6	105	2.CD.100520.ATC	■
5.30		53.0	68.9	6	105	2.CD.100530.ATC	■
5.40		54.0	70.2	6	112	2.CD.100540.ATC	■
5.50		55.0	71.5	6	112	2.CD.100550.ATC	■
5.560	7/32	56.0	72.3	6	112	2.CD.100F732.ATC	■
5.60		56.0	72.8	6	112	2.CD.100560.ATC	■
5.70		57.0	74.1	6	112	2.CD.100570.ATC	■
5.80		58.0	75.4	6	112	2.CD.100580.ATC	■
5.90		59.0	76.7	6	112	2.CD.100590.ATC	■
6.00		60.0	78.0	6	112	2.CD.100600.ATC	■
6.350	1/4	63.5	82.6	8	125	2.CD.100F14.ATC	■

Complementary products
CrazyDrill Coolpilot Titanium p.66

CrazyDrill Cool Titanium PTC - 3 x d

DRILLING WITH INTERNAL COOLING

Carbide			Z2		
Ø d _i	0.1 - 3.0 mm		3.05 - 6.0 mm	6.1 - 10.0 mm	
Tolerance	+ 0.006 mm 0		+ 0.009 mm + 0.001 mm	+ 0.010 mm + 0.001 mm	

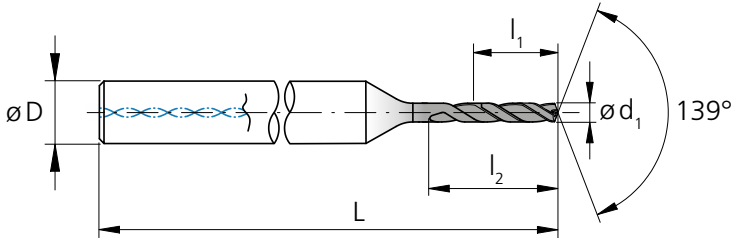

d ₁ [mm]	d ₁ [inch]	l ₁ [mm]	l ₂ [mm]	D (h6) [mm]	L [mm]	Item number	Availability
1.00		3.00	6.0	4	50	2.CD.030100.PTC	■
1.05		3.15	6.3	4	50	2.CD.030105.PTC	■
1.10		3.30	6.6	4	50	2.CD.030110.PTC	■
1.15		3.45	6.9	4	50	2.CD.030115.PTC	■
1.20		3.60	7.2	4	50	2.CD.030120.PTC	■
1.25		3.75	7.5	4	50	2.CD.030125.PTC	■
1.30		3.90	7.8	4	50	2.CD.030130.PTC	■
1.35		4.05	8.1	4	50	2.CD.030135.PTC	■
1.40		4.20	8.4	4	50	2.CD.030140.PTC	■
1.45		4.35	8.7	4	50	2.CD.030145.PTC	■
1.50		4.50	9.0	4	50	2.CD.030150.PTC	■
1.55		4.65	9.3	4	50	2.CD.030155.PTC	■
1.587	1/16	4.76	9.5	4	50	2.CD.030F116.PTC	■
1.60		4.80	9.6	4	50	2.CD.030160.PTC	■
1.65		4.95	9.9	4	50	2.CD.030165.PTC	■
1.70		5.10	10.2	4	53	2.CD.030170.PTC	■
1.75		5.25	10.5	4	53	2.CD.030175.PTC	■
1.80		5.40	10.8	4	53	2.CD.030180.PTC	■
1.85		5.55	11.1	4	53	2.CD.030185.PTC	■
1.90		5.70	11.4	4	53	2.CD.030190.PTC	■
1.95		5.85	11.7	4	53	2.CD.030195.PTC	■
2.00		6.00	12.0	4	55	2.CD.030200.PTC	■

■ Stock item

d ₁ [mm]	d ₁ [inch]	l ₁ [mm]	l ₂ [mm]	D (h6) [mm]	L [mm]	Item number	Availability
2.05		6.15	12.3	4	55	2.CD.030205.PTC	■
2.10		6.30	12.6	4	55	2.CD.030210.PTC	■
2.15		6.45	12.9	4	55	2.CD.030215.PTC	■
2.20		6.60	13.2	4	55	2.CD.030220.PTC	■
2.25		6.75	13.5	4	55	2.CD.030225.PTC	■
2.30		6.90	13.8	4	57	2.CD.030230.PTC	■
2.35		7.05	14.1	4	57	2.CD.030235.PTC	■
2.381	3/32	7.14	14.3	4	57	2.CD.030F332.PTC	■
2.40		7.20	14.4	4	57	2.CD.030240.PTC	■
2.45		7.35	14.7	4	57	2.CD.030245.PTC	■
2.50		7.50	15.0	4	57	2.CD.030250.PTC	■
2.55		7.65	15.3	4	57	2.CD.030255.PTC	■
2.60		7.80	15.6	4	57	2.CD.030260.PTC	■
2.65		7.95	15.9	4	57	2.CD.030265.PTC	■
2.70		8.10	16.2	4	57	2.CD.030270.PTC	■
2.75		8.25	16.5	4	57	2.CD.030275.PTC	■
2.80		8.40	16.8	4	57	2.CD.030280.PTC	■
2.85		8.55	17.1	4	57	2.CD.030285.PTC	■
2.90		8.70	17.4	4	57	2.CD.030290.PTC	■
2.95		8.85	17.7	4	57	2.CD.030295.PTC	■
3.00		9.00	18.0	6	65	2.CD.030300.PTC	■
3.05		9.15	18.3	6	65	2.CD.030305.PTC	■

d ₁ [mm]	d ₁ [inch]	l ₁ [mm]	l ₂ [mm]	D (h6) [mm]	L [mm]	Item number	Availability
3.10		9.30	18.6	6	65	2.CD.030310.PTC	■
3.15		9.45	18.9	6	65	2.CD.030315.PTC	■
3.175	1/8	9.53	19.1	6	65	2.CD.030F18.PTC	■
3.20		9.60	19.2	6	65	2.CD.030320.PTC	■
3.25		9.75	19.5	6	65	2.CD.030325.PTC	■
3.30		9.90	19.8	6	65	2.CD.030330.PTC	■
3.35		10.05	20.1	6	65	2.CD.030335.PTC	■
3.40		10.20	20.4	6	65	2.CD.030340.PTC	■
3.45		10.35	20.7	6	65	2.CD.030345.PTC	■
3.50		10.50	21.0	6	68	2.CD.030350.PTC	■
3.55		10.65	21.3	6	68	2.CD.030355.PTC	■
3.60		10.80	21.6	6	68	2.CD.030360.PTC	■
3.65		10.95	21.9	6	68	2.CD.030365.PTC	■
3.70		11.10	22.2	6	68	2.CD.030370.PTC	■
3.75		11.25	22.5	6	68	2.CD.030375.PTC	■
3.80		11.40	22.8	6	68	2.CD.030380.PTC	■
3.85		11.55	23.1	6	68	2.CD.030385.PTC	■
3.90		11.70	23.4	6	68	2.CD.030390.PTC	■
3.95		11.85	23.7	6	68	2.CD.030395.PTC	■
3.968	5/32	11.90	23.8	6	68	2.CD.030F532.PTC	■
4.00		12.00	24.0	6	68	2.CD.030400.PTC	■
4.10		12.30	24.6	6	72	2.CD.030410.PTC	■


■ Stock item

d ₁ [mm]	d ₁ [inch]	l ₁ [mm]	l ₂ [mm]	D (h6) [mm]	L [mm]	Item number	Availability
4.20		12.60	25.2	6	72	2.CD.030420.PTC	■
4.30		12.90	25.8	6	72	2.CD.030430.PTC	■
4.40		13.20	26.4	6	72	2.CD.030440.PTC	■
4.50		13.50	27.0	6	72	2.CD.030450.PTC	■
4.60		13.80	27.6	6	72	2.CD.030460.PTC	■
4.70		14.10	28.2	6	75	2.CD.030470.PTC	■
4.762	3/16	14.29	28.6	6	75	2.CD.030F316.PTC	■
4.80		14.40	28.8	6	75	2.CD.030480.PTC	■
4.90		14.70	29.4	6	75	2.CD.030490.PTC	■
5.00		15.00	30.0	6	75	2.CD.030500.PTC	■
5.10		15.30	30.6	6	75	2.CD.030510.PTC	■
5.20		15.60	31.2	6	75	2.CD.030520.PTC	■
5.30		15.90	31.8	6	75	2.CD.030530.PTC	■
5.40		16.20	32.4	6	80	2.CD.030540.PTC	■
5.50		16.50	33.0	6	80	2.CD.030550.PTC	■
5.560	7/32	16.68	33.4	6	80	2.CD.030F732.PTC	■
5.60		16.80	33.6	6	80	2.CD.030560.PTC	■
5.70		17.10	34.2	6	80	2.CD.030570.PTC	■
5.80		17.40	34.8	6	80	2.CD.030580.PTC	■
5.90		17.70	35.4	6	80	2.CD.030590.PTC	■
6.00		18.00	36.0	6	80	2.CD.030600.PTC	■
6.350	1/4	19.05	38.1	8	80	2.CD.030F14.PTC	■

CrazyDrill Cool Titanium PTC - 6 x d

DRILLING WITH INTERNAL COOLING

Carbide			Z2		
Ø d _i	0.1 - 3.0 mm	3.05 - 6.0 mm	6.1 - 10.0 mm		
Tolerance	+ 0.006 mm 0	+ 0.009 mm + 0.001 mm	+ 0.010 mm + 0.001 mm		

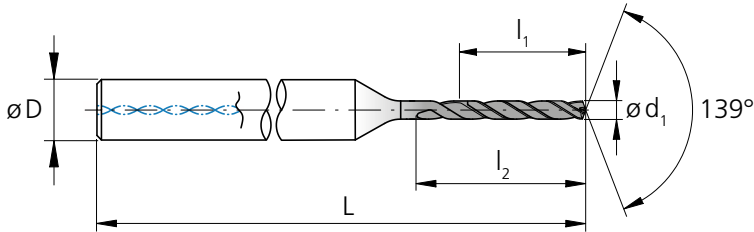

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
1.00		6.0	9.0	4	55	2.CD.060100.PTC	■
1.05		6.3	9.5	4	55	2.CD.060105.PTC	■
1.10		6.6	9.9	4	55	2.CD.060110.PTC	■
1.15		6.9	10.4	4	55	2.CD.060115.PTC	■
1.20		7.2	10.8	4	57	2.CD.060120.PTC	■
1.25		7.5	11.3	4	57	2.CD.060125.PTC	■
1.30		7.8	11.7	4	57	2.CD.060130.PTC	■
1.35		8.1	12.2	4	57	2.CD.060135.PTC	■
1.40		8.4	12.6	4	57	2.CD.060140.PTC	■
1.45		8.7	13.1	4	58	2.CD.060145.PTC	■
1.50		9.0	13.5	4	58	2.CD.060150.PTC	■
1.55		9.3	14.0	4	58	2.CD.060155.PTC	■
1.587	1/16	9.5	14.3	4	58	2.CD.060F116.PTC	■
1.60		9.6	14.4	4	58	2.CD.060160.PTC	■
1.65		9.9	14.9	4	58	2.CD.060165.PTC	■
1.70		10.2	15.3	4	60	2.CD.060170.PTC	■
1.75		10.5	15.8	4	60	2.CD.060175.PTC	■
1.80		10.8	16.2	4	60	2.CD.060180.PTC	■
1.85		11.1	16.7	4	60	2.CD.060185.PTC	■
1.90		11.4	17.1	4	60	2.CD.060190.PTC	■
1.95		11.7	17.6	4	60	2.CD.060195.PTC	■
2.00		12.0	18.0	4	63	2.CD.060200.PTC	■

■ Stock item

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
2.05		12.3	18.5	4	63	2.CD.060205.PTC	■
2.10		12.6	18.9	4	63	2.CD.060210.PTC	■
2.15		12.9	19.4	4	63	2.CD.060215.PTC	■
2.20		13.2	19.8	4	63	2.CD.060220.PTC	■
2.25		13.5	20.3	4	63	2.CD.060225.PTC	■
2.30		13.8	20.7	4	65	2.CD.060230.PTC	■
2.35		14.1	21.2	4	65	2.CD.060235.PTC	■
2.381	3/32	14.3	21.4	4	65	2.CD.060F332.PTC	■
2.40		14.4	21.6	4	65	2.CD.060240.PTC	■
2.45		14.7	22.1	4	65	2.CD.060245.PTC	■
2.50		15.0	22.5	4	65	2.CD.060250.PTC	■
2.55		15.3	23.0	4	65	2.CD.060255.PTC	■
2.60		15.6	23.4	4	68	2.CD.060260.PTC	■
2.65		15.9	23.9	4	68	2.CD.060265.PTC	■
2.70		16.2	24.3	4	68	2.CD.060270.PTC	■
2.75		16.5	24.8	4	68	2.CD.060275.PTC	■
2.80		16.8	25.2	4	68	2.CD.060280.PTC	■
2.85		17.1	25.7	4	68	2.CD.060285.PTC	■
2.90		17.4	26.1	4	68	2.CD.060290.PTC	■
2.95		17.7	26.6	4	68	2.CD.060295.PTC	■
3.00		18.0	27.0	6	74	2.CD.060300.PTC	■
3.05		18.3	27.5	6	74	2.CD.060305.PTC	■

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
3.10		18.6	27.9	6	74	2.CD.060310.PTC	■
3.15		18.9	28.4	6	74	2.CD.060315.PTC	■
3.175	1/8	19.1	28.6	6	74	2.CD.060F18.PTC	■
3.20		19.2	28.8	6	74	2.CD.060320.PTC	■
3.25		19.5	29.3	6	74	2.CD.060325.PTC	■
3.30		19.8	29.7	6	74	2.CD.060330.PTC	■
3.35		20.1	30.2	6	74	2.CD.060335.PTC	■
3.40		20.4	30.6	6	74	2.CD.060340.PTC	■
3.45		20.7	31.1	6	74	2.CD.060345.PTC	■
3.50		21.0	31.5	6	78	2.CD.060350.PTC	■
3.55		21.3	32.0	6	78	2.CD.060355.PTC	■
3.60		21.6	32.4	6	78	2.CD.060360.PTC	■
3.65		21.9	32.9	6	78	2.CD.060365.PTC	■
3.70		22.2	33.3	6	78	2.CD.060370.PTC	■
3.75		22.5	33.8	6	78	2.CD.060375.PTC	■
3.80		22.8	34.2	6	78	2.CD.060380.PTC	■
3.85		23.1	34.7	6	78	2.CD.060385.PTC	■
3.90		23.4	35.1	6	78	2.CD.060390.PTC	■
3.95		23.7	35.6	6	78	2.CD.060395.PTC	■
3.968	5/32	23.8	35.7	6	78	2.CD.060F532.PTC	■
4.00		24.0	36.0	6	78	2.CD.060400.PTC	■
4.10		24.6	36.9	6	80	2.CD.060410.PTC	■

■ Stock item

d ₁	d ₁	l ₁	l ₂	D (h6)	L	Item number	Availability
[mm]	[inch]	[mm]	[mm]	[mm]	[mm]		
4.20		25.2	37.8	6	80	2.CD.060420.PTC	■
4.30		25.8	38.7	6	80	2.CD.060430.PTC	■
4.40		26.4	39.6	6	80	2.CD.060440.PTC	■
4.50		27.0	40.5	6	80	2.CD.060450.PTC	■
4.60		27.6	41.4	6	80	2.CD.060460.PTC	■
4.70		28.2	42.3	6	84	2.CD.060470.PTC	■
4.762	3/16	28.6	42.9	6	84	2.CD.060F316.PTC	■
4.80		28.8	43.2	6	84	2.CD.060480.PTC	■
4.90		29.4	44.1	6	84	2.CD.060490.PTC	■
5.00		30.0	45.0	6	84	2.CD.060500.PTC	■
5.10		30.6	45.9	6	84	2.CD.060510.PTC	■
5.20		31.2	46.8	6	84	2.CD.060520.PTC	■
5.30		31.8	47.7	6	84	2.CD.060530.PTC	■
5.40		32.4	48.6	6	88	2.CD.060540.PTC	■
5.50		33.0	49.5	6	88	2.CD.060550.PTC	■
5.560	7/32	33.4	50.0	6	88	2.CD.060F732.PTC	■
5.60		33.6	50.4	6	88	2.CD.060560.PTC	■
5.70		34.2	51.3	6	88	2.CD.060570.PTC	■
5.80		34.8	52.2	6	88	2.CD.060580.PTC	■
5.90		35.4	53.1	6	88	2.CD.060590.PTC	■
6.00		36.0	54.0	6	88	2.CD.060600.PTC	■
6.350	1/4	38.1	57.2	8	98	2.CD.060F14.PTC	■

ATC - 3 x d / 6 x d / 10 x d


RECOMMENDATION FOR USE
● Excellent | ● Good | ○ Acceptable | ☒ Not recommended

P	N	S ₃	☒
M	S ₁	H ₁	☒
K	S ₂	H ₂	☒

DRILLING WITH INTERNAL COOLING | CUTTING DATA OVERVIEW



										f [mm/rev]																
Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c [m/min]		1.0 mm		1.25 mm		1.5 mm 1/16"		2.0 mm		Ød1 2.5 mm 3/32"		3.0 mm 1/8"		4.0 mm 5/32"		5.0 mm 3/16" - 7/32"		6.0 mm 1/4"			
					Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High		
S ₂	Titanium alloys	3.7165	TiAl6V4	ASTM B348 / F136	40	60			0.020	0.025	0.025	0.030	0.030	0.035	0.035	0.045	0.045	0.055	0.050	0.065	0.060	0.075	0.070	0.085	0.075	0.090
		9.9367	TiAl6Nb7	ASTM F1295																						

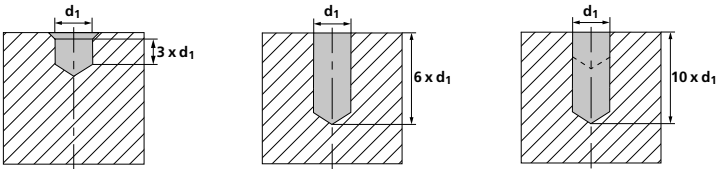


PTC - 3 x d / 6 x d

DRILLING WITH INTERNAL COOLING | CUTTING DATA OVERVIEW



										f [mm/rev]																	
Materials group	Material	Mat. no.	DIN	AISI/ASTM/UNS	v _c		Q _x	R _x	1.0 mm		1.25 mm		1.5 mm 1/16"		2.0 mm		Ød1 2.5 mm 3/32"		3.0 mm 1/8"		4.0 mm 5/32"		5.0 mm 3/16" - 7/32"		6.0 mm 1/4"		
					[m/min]				[mm]	[mm]	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid	High	Mid
					Mid	High																					
S ₂	Pure titanium	3.7035	Ti Gr.2	ASTM B348 / F67	30	60	0.2 - 0.5 x d1	0.2 - 0.5 x d1		0.010	0.020	0.013	0.025	0.015	0.030	0.020	0.040	0.025	0.050	0.030	0.055	0.040	0.070	0.050	0.080	0.060	0.090
		3.7065	Ti Gr.4	ASTM B348 / F68			-	-																			

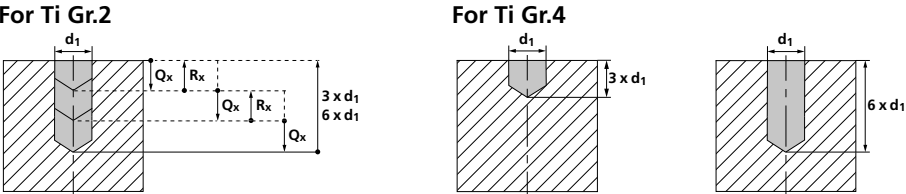

Chip breaking cycle (e.g.: G73)

Drilling process CrazyDrill Cool Titanium

PRECISE AND FAST DRILLING UP TO 10 X D IN TITANIUM ALLOYS

Coolant type, pressure and filtration

Coolant type

For best results, Mikron Tool recommends the use of 8% emulsion with EP-Additives (Extreme-Pressure-Additives) as coolant fluid. Alternatively, cutting oil can be used with good results as well.

Filtration: Good filter quality is very important when using through coolant drills. Dirt particles or residual chips can clog the coolant holes and consequently dramatically reduce the flowrate.

The following filter qualities must be adhered to, especially with small diameters:

- Drill with Ø < 2 mm filter quality ≤ 0.010 mm.
- Drill with Ø < 3 mm filter quality ≤ 0.020 mm.
- Drill with Ø < 6 mm filter quality ≤ 0.050 mm.

Coolant pressure: The minimum coolant pressure mentioned in the chart is required for the CrazyDrill Cool Titanium to achieve reliable drilling. Higher pressure is generally better for the cooling and flushing effect.

Ø d, Tool	[mm]	1.0 mm - 2.0 mm	2.0 mm - 4.0 mm	4.0 mm - 6.35 mm
Version		3 - 6 - 10 x d	3 - 6 - 10 x d	3 - 6 - 10 x d
Minimal pressure	[bar]	40	30	30

CrazyDrill Cool Titanium ATC 6 x d

Because of the high degree of self-centering capability, CrazyDrill Cool Titanium ATC 6 x d can be used on regular and straight surfaces without a centering or pilot hole.

Higher requirements: For irregular, respectively rough or inclined surfaces or for the highest degree of position accuracy, Mikron Tool recommends:

- CrazyDrill Coolpilot Titanium ATC as pilot drill
- CrazyDrill Crosspilot as pilot drill for inclined surfaces

CrazyDrill Cool Titanium ATC 10 x d

We recommend pilot drilling with CrazyDrill Coolpilot Titanium ATC or CrazyDrill Crosspilot on inclined surfaces.

CrazyDrill Cool Titanium PTC 3 x d

Because of the high degree of self-centering capability, CrazyDrill Cool Titanium PTC 3 x d can be used on regular and straight surfaces without a centering or pilot hole.

CrazyDrill Cool Titanium PTC 6 x d

Because of the high degree of self-centering capability, CrazyDrill Cool Titanium PTC 6 x d can be used on regular and straight surfaces without a centering or pilot hole.

Higher requirements: For irregular, respectively rough or inclined surfaces or for the highest degree of position accuracy, Mikron Tool recommends:

- CrazyDrill Cool Titanium PTC 3 x d as pilot drill
- CrazyDrill Crosspilot as pilot drill for inclined surfaces

Pilot drilling and drilling


Pilot drilling with CrazyDrill Coolpilot Titanium ATC or CrazyDrill Crosspilot (on inclined surfaces) is the perfect starting point for accurate drilling (position and alignment accuracy). The drilling quality (no measurable transition from pilot drilling to follow-up drilling) is guaranteed due to predetermined tool tolerances.

Drilling process of titanium alloy Gr.5 / Gr.Nb

Drilling process of pure titanium Gr.2


1 | PILOT DRILLING

- Turn on internal coolant.
- Drill with CrazyDrill Coolpilot Titanium ATC up to $3 \times d$, on irregular or rough surfaces.
With simultaneous chamfer of 90° .
- Drill with CrazyDrill Crosspilot on inclined surfaces.

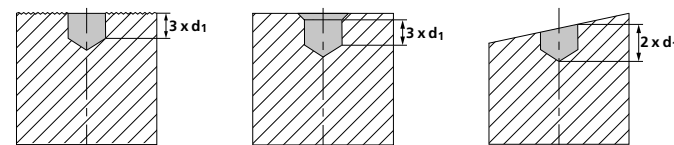

2 | DRILLING

- Turn on internal coolant.
- Drill with CrazyDrill Cool Titanium ATC in one step with recommended drilling speed and feed (see cutting data chart).

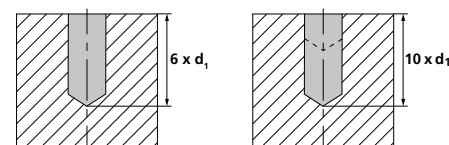

Note:

After the drill has reached the desired cutting depth, return at increased feed rate to safety position. With CrazyDrill Cool Titanium ATC it is possible to enter the material and drill up to $10 \times d$ using the recommended cutting speed and feed.

Drilling as per DIN 66025 / PAL


G73 chip breaking drilling cycle

Q_x = depth of the respective peck

R_x = retract value


1 | PILOT DRILLING (ONLY ON INCLINED SURFACES)

- Drill with CrazyDrill Crosspilot on inclined surfaces.

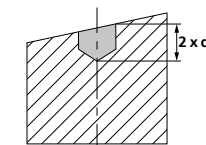

2 | DRILLING

- Turn on internal coolant.
- Drill with CrazyDrill Cool Titanium PTC in a chip breaking drilling cycle with recommended drilling speed and feed (see cutting data chart).

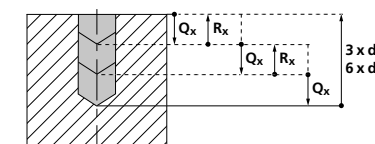


Note:

After the drill has reached the desired cutting depth, return at increased feed rate to safety position. With CrazyDrill Cool Titanium PTC it is possible to enter the material and drill up to $6 \times d$ using the recommended cutting speed and feed.

Drilling process of pure titanium Gr.4


1 | PILOT DRILLING (ONLY ON INCLINED SURFACES)

- Drill with CrazyDrill Crosspilot on inclined surfaces.

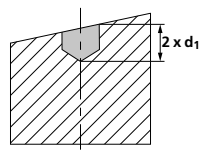

2 | DRILLING

- Turn on internal coolant.
- Drill with CrazyDrill Cool Titanium PTC in one step with recommended drilling speed and feed (see cutting data chart).

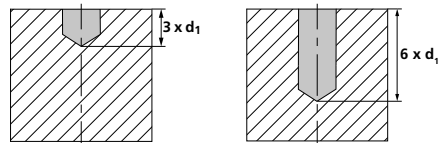

Note:

After the drill has reached the desired cutting depth, return at increased feed rate to safety position. With CrazyDrill Cool Titanium PTC it is possible enter the material and drill up to 6 x d using the recommended cutting speed and feed.

Mastercam

News: Tool libraries of all Mikron Tool catalog products are available on Mastercam's Tech Exchange, ready for download!



Headquarter
Production and International Sales
MIKRON SWITZERLAND AG, AGNO
Division Tool
Via Campagna 1
6982 Agno
Switzerland
Phone +41 91 610 40 00
mto@mikron.com

Production and Sales
Germany & Eastern Europe
MIKRON GERMANY GMBH
Abteilung Werkzeuge
Berner Feld 71
78628 Rottweil
Germany
Phone +49 741 5380 450
info.mtr@mikron.com

Production and Sales
North & South America
MIKRON CORP. MONROE, PLANT ILLINOIS
1090 Pratt Blvd.
Elk Grove Village, IL 60007
USA
Phone +1 203 261 31 00
mmo@mikron.com

China Sales
MIKRON TOOL (SHANGHAI) CO., LTD.
Room A209, Building 3,
No. 526, 3rd East Fu Te Road,
Shanghai, 200131
P. R. China
Phone +86 21 2076 5671
mtc@mikron.com
地址: 中国 (上海) 自由贸易试验区
中国上海市富特东三路526号3号楼第二层
A209室
邮编: 200131

